


ROBOTICS

# Product specification

## IRB 2600

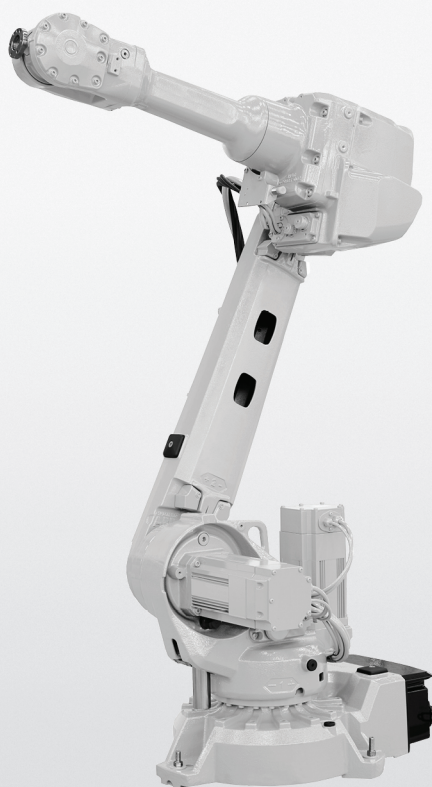

Trace back information:  
Workspace R18-2 version a10  
Checked in 2018-10-10  
Skribenta version 5.3.008

## **Product specification**

**IRB 2600-20/1.65**

**IRB 2600-12/1.65**

**IRB 2600-12/1.85**

**IRB 2600ID-15/1.85**

**IRB 2600ID-8/2.0**

**Document ID: 3HAC035959-001**

**Revision: S**

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damages to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2009-2018 ABB. All rights reserved.  
Specifications subject to change without notice.

ABB AB, Robotics  
Robotics and Motion  
Se-721 68 Västerås  
Sweden



# Table of contents

Overview of this specification .....	7
<b>1 Description</b> .....	<b>9</b>
1.1 Structure .....	9
1.1.1 Introduction to Structure .....	9
1.1.2 Different robot versions .....	12
1.2 Standards .....	18
1.2.1 Applicable standards .....	18
1.3 Installation .....	20
1.3.1 Introduction to installation .....	20
1.3.2 Operating requirements .....	21
1.3.3 Mounting the manipulator .....	22
1.4 Calibration and references .....	26
1.4.1 Fine calibration .....	26
1.4.2 Absolute Accuracy calibration .....	27
1.5 Robot load and load diagrams .....	29
1.5.1 Introduction to Robot load and load diagrams .....	29
1.5.2 Load diagrams .....	31
1.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement .....	40
1.5.4 Wrist torque .....	42
1.5.5 Maximum TCP acceleration .....	43
1.6 Mounting equipment .....	44
1.6.1 Information about mounting equipment .....	44
1.7 Maintenance and Troubleshooting .....	53
1.7.1 Introduction to Maintenance and Troubleshooting .....	53
1.8 Robot Motion .....	54
1.8.1 Introduction to Robot Motion .....	54
1.8.2 Performance according to ISO 9283 .....	57
1.8.3 Velocity .....	58
1.8.4 Robot stopping distances and times .....	59
1.9 Cooling fan for axis 1-2 motor .....	60
1.10 Customer connections .....	61
1.10.1 Introduction .....	61
<b>2 Specification of variants and options</b> .....	<b>63</b>
2.1 Introduction to variants and options .....	63
2.2 Manipulator .....	64
2.3 Positioners .....	69
2.4 Floor cables .....	70
2.5 DressPack .....	71
2.6 Process equipment .....	72
2.7 User documentation .....	73
<b>3 Accessories</b> .....	<b>75</b>
3.1 Introduction to accessories .....	75
<b>Index</b> .....	<b>77</b>

**This page is intentionally left blank**

# Overview of this specification

## About this product specification

It describes the performance of the manipulator or a complete family of manipulators in terms of:

- The structure and dimensions prints
- The fulfillment of standards, safety and operating requirements
- The load diagrams, mounting or extra equipment, the motion and the robot reach
- The specification of variants and options available

## Usage

Product specifications are used to find data and performance about the product, for example to decide which product to buy. How to handle the product is described in the product manual.

## Users

It is intended for:

- Product managers and Product personnel
- Sales and Marketing personnel
- Order and Customer Service personnel

## References

Reference	Document ID
<i>Product specification - Controller IRC5</i> IRC5 with main computer DSQC1000.	3HAC047400-001
<i>Product specification - Controller software IRC5</i> IRC5 with main computer DSQC1000 and RobotWare 5.6x.	3HAC050945-001
<i>Product specification - Controller software IRC5</i> IRC5 with main computer DSQC1000 and RobotWare 6.	3HAC050945-001
<i>Product manual - IRB 2600</i>	3HAC035504-001
<i>Product specification - Robot user documentation, IRC5 with RobotWare 6</i>	3HAC052355-001

## Revisions

Revision	Description
-	First edition
A	Foundry Plus 2
B	ID-versions added
C	Minor corrections
D	<ul style="list-style-type: none"> <li>• Table for ambient temperature adjusted</li> <li>• Value added to drawing, Mounting surface and bushings</li> <li>• Minor corrections</li> </ul>

*Continues on next page*

Revision	Description
E	<ul style="list-style-type: none"> <li>• Machinery directive updated</li> <li>• Foundation forces updated</li> </ul>
F	<ul style="list-style-type: none"> <li>• General updates and minor corrections</li> </ul>
G	<ul style="list-style-type: none"> <li>• General updates and minor corrections</li> </ul>
H	<ul style="list-style-type: none"> <li>• Minor corrections and updates</li> </ul>
J	<ul style="list-style-type: none"> <li>• Text for ISO test adjusted</li> <li>• Robot stopping distances and times for category 0 and category 1 stops are moved to a separate document, <i>Product specification - Robot stopping distances according to ISO 10218-1</i></li> </ul>
K	<ul style="list-style-type: none"> <li>• Text for Foundry Plus updated.</li> <li>• Minor corrections and updates</li> </ul>
L	<ul style="list-style-type: none"> <li>• Description option 908-1 added</li> <li>• Option Tool Sytem TS 2600ID added</li> <li>• Tilting around X-axis added</li> </ul>
M	<ul style="list-style-type: none"> <li>• Name changed for Option 991-1, from <i>Manifold TS 2600ID</i> to <i>Tool Attachment TS 2600ID</i>. See <a href="#">Manipulator on page 64</a>.</li> <li>• Number of M16 threaded holes in base changed.</li> </ul>
N	<ul style="list-style-type: none"> <li>• Illustrations for Tool flange standard/LeanID changed, see <a href="#">Mounting equipment on page 44</a></li> </ul>
P	<ul style="list-style-type: none"> <li>• Product data for AbsAcc added and changed, see <a href="#">Product data on page 28</a></li> </ul>
Q	<p>Published in release R17.1. The following updates are done in this revision:</p> <ul style="list-style-type: none"> <li>• Restriction of load diagram added.</li> <li>• Added data for tilted mounting, <a href="#">Mounting the manipulator on page 22</a>.</li> <li>• Updated drawing for tool flange, <a href="#">Information about mounting equipment on page 44</a>.</li> </ul>
R	<p>Published in release R17.2. The following updates are done in this revision:</p> <ul style="list-style-type: none"> <li>• Tool flange drawings changed</li> <li>• Updated list of applicable standards.</li> <li>• TCP acceleration information added</li> </ul>
S	<p>Published in release R18.2. The following updates are done in this revision:</p> <ul style="list-style-type: none"> <li>• Manipulator axes rotation direction figure updated.</li> <li>• Removed the phased out options: option Tool System TS 2600ID [989-1], option Tool Changer TS 2600ID [990-1], option Tool Attachment TS 2600ID [991-1], welding torch package options [878-X], option AristoMig 5000i [1029-14], current/hose set options [1030-X], and feed kit options [1033-X].</li> <li>• Added pin hole dimension to tool flange/wrist dimension for IRB 2600ID.</li> </ul>

# 1 Description

## 1.1 Structure

### 1.1.1 Introduction to Structure

---

**Robot family**

The IRB 2600 is ABB Robotics latest robot of the new sharp generation with enhanced and new capabilities. It is available in five versions, and the latest ones are IRB 2600ID-15/1.85 and IRB 2600ID-8/2.00 with a process upper arm. The design has been optimized to make it superior for the targeted applications. The IRB 2600 will focus on further expansion in, Dispensing, Machining, Measuring, Assembly and Arc Welding applications.

---

**Operating system**

The robot is equipped with the IRC5 controller and robot control software, RobotWare. RobotWare supports every aspect of the robot system, such as motion control, development and execution of application programs, communication etc. See *Product specification - Controller IRC5 with FlexPendant*.

---

**Safety**

Safety standards valid for complete robot, manipulator and controller.

---

**Additional functionality**

For additional functionality, the robot can be equipped with optional software for application support - for example gluing and welding, communication features - network communication - and advanced functions such as multi-tasking, sensor control, etc. For a complete description on optional software, see *Product specification - Controller software IRC5*.

---

**Protection type Foundry Plus 2**

Robots with the option Foundry Plus 2 are designed for harsh environments where the robot is exposed to sprays of coolants, lubricants and metal spits that are typical for die casting applications or other similar applications.

Typical applications are spraying insertion and part extraction of die-casting machines, handling in sand casting and gravity casting, etc. (Please refer to Foundry Prime robots for washing applications or other similar applications). Special care must be taken in regard to operational and maintenance requirements for applications in foundry as well as in other applications areas. Please contact ABB Robotics Sales organization if in doubt regarding specific application feasibility for the Foundry Plus 2 protected robot.

The robot is painted with two-component epoxy on top of a primer for corrosion protection. To further improve the corrosion protection additional rust preventive are applied to exposed and crucial areas, e.g. has the tool flange a special preventive coating. Although, continuous splashing of water or other similar rust formation fluids may cause rust attach on the robots unpainted areas, joints, or

*Continues on next page*

# 1 Description

---

## 1.1.1 Introduction to Structure

*Continued*

other unprotected surfaces. Under these circumstances it is recommended to add rust inhibitor to the fluid or take other measures to prevent potential rust formation on the mentioned.

The entire robot is IP67 compliant according to IEC 60529 - from base to wrist, which means that the electrical compartments are sealed against water and solid contaminants. Among other things all sensitive parts are better protected than the standard offer.

Selected Foundry Plus 2 features:

- Improved sealing to prevent penetration into cavities to secure IP67
- Additional protection of cabling and electronics
- Special covers that protect cavities
- Well-proven connectors
- Nickel coated tool flange
- Rust preventives on screws, washers and unpainted/machined surfaces
- Extended service and maintenance program

The Foundry Plus 2 robot can be cleaned with appropriate washing equipment according to the robot product manual. Appropriate cleaning and maintenance is required to maintain the protection, for example can rust preventive be washed off with wrong cleaning method.


Available robot versions

The option Foundry Plus 2 might not be available for all robot versions.

See [Specification of variants and options on page 63](#) for robot versions and other options not selectable together with Foundry Plus 2.

*Continues on next page*

### Manipulator axes

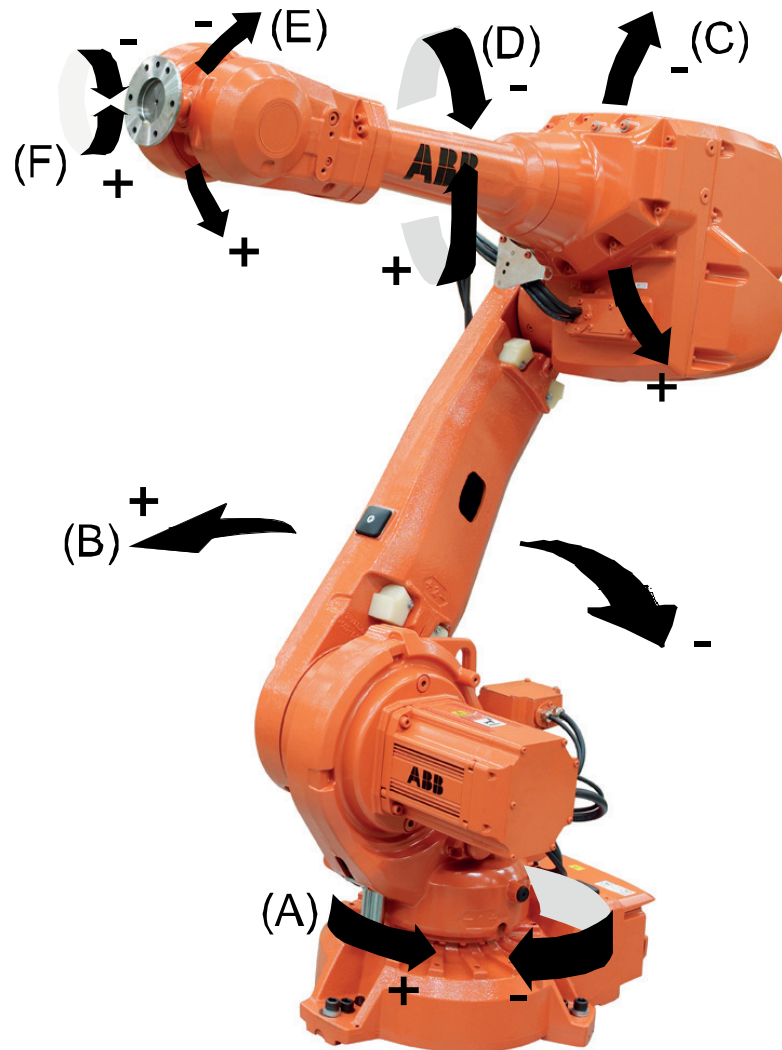

xx1800001381

Pos	Description	Pos	Description
A	Axis 1	B	Axis 2
C	Axis 3	D	Axis 4
E	Axis 5	F	Axis 6

# 1 Description

## 1.1.2 Different robot versions

### 1.1.2 Different robot versions

#### General

The IRB 2600 is available in five variants and they can be wall mounted, inverted or tilted (up to 45 degrees around the Y-axis or X-axis). See [Introduction to Robot load and load diagrams on page 29](#) for limitations.

Robot type	Handling capacity (kg)	Reach (m)
IRB 2600	20	1.65
IRB 2600	12	1.65
IRB 2600	12	1.85
IRB 2600ID	15	1.85
IRB 2600ID	8	2.00

#### Manipulator weight

Robot type	Weight
IRB 2600-20/1.65	272 kg
IRB 2600-12/1.65	272 kg
IRB 2600-12/1.85	284 kg
IRB 2600ID-15/1.85	273 kg
IRB 2600ID-8/2.00	276 kg

#### Other technical data

Data	Description	Note
Airborn noise level	The sound pressure level outside the working space	< 69 dB (A) Leq (acc. to Machinery directive 2006/42/EG)


#### Power consumption at max load

Type of Movement	IRB 2600				
	-20/1.65	-12/1.65	-12/1.85	ID-15/1.85	ID-8/2.00
ISO Cube Max. velocity	0.92 kW	0.94 kW	0.92 kW	0.86 kW	0.86 kW

Robot in calibration position	IRB 2600				
	-20/1.65	-12/1.65	-12/1.85	ID-15/1.85	ID-8/2.00
Brakes engaged	0.198 kW	0.198 kW	0.232 kW	0.206 kW	0.207 kW
Brakes disengaged	0.43 kW	0.40 kW	0.43 kW	0.40 kW	0.39 kW

*Continues on next page*



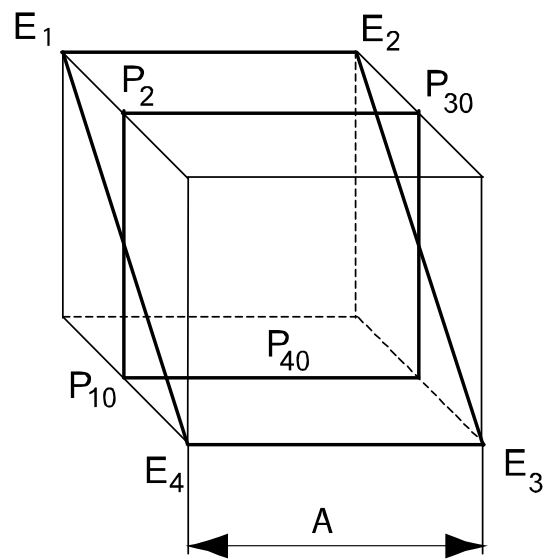

xx0900001012


Pos	Description
A	630 mm

*Continues on next page*

1 Description

1.1.2 Different robot versions  
Continued

Dimensions IRB 2600-20(12)/1.65

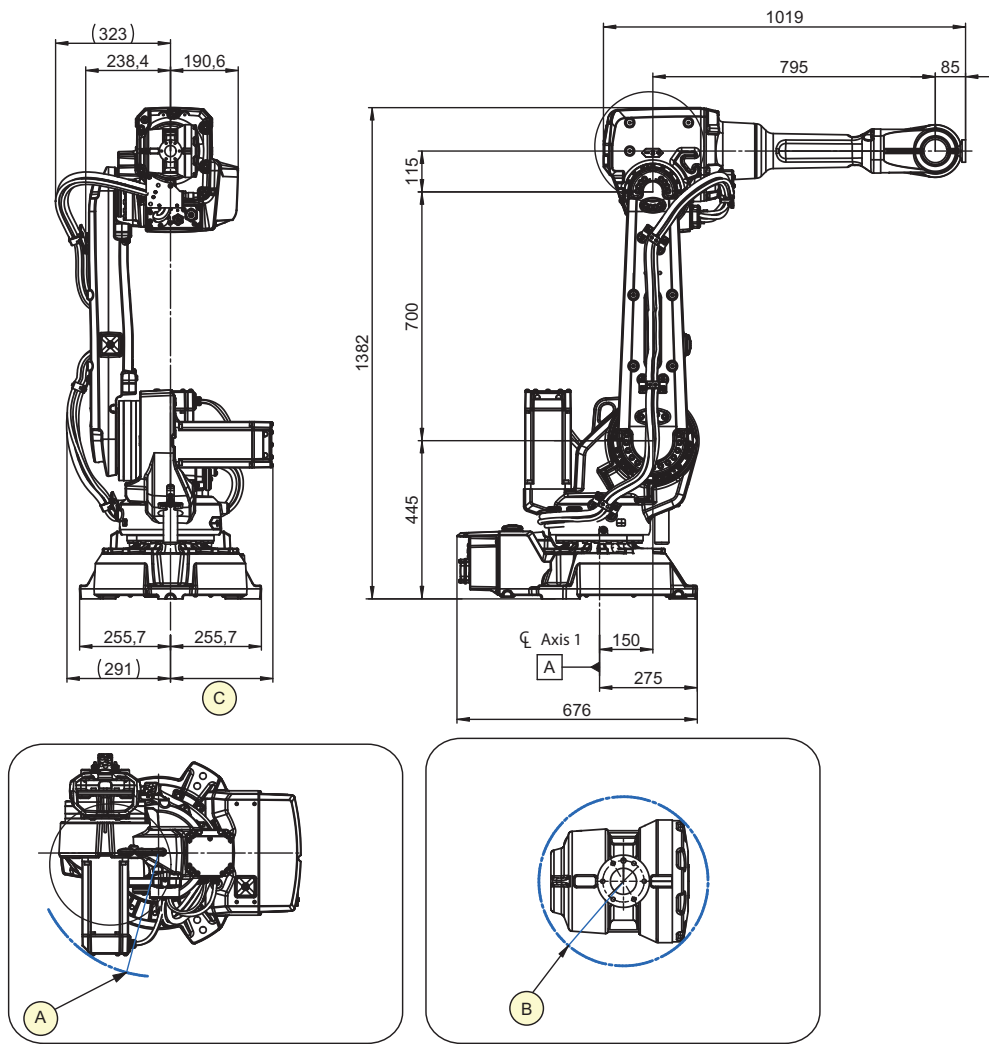


xx0900000481

Pos	Description
A	R 341 Minimum turning radius of axis 1
B	R 98 Minimum turning radius of axis 4

Continues on next page

### Dimensions IRB 2600-12/1.85

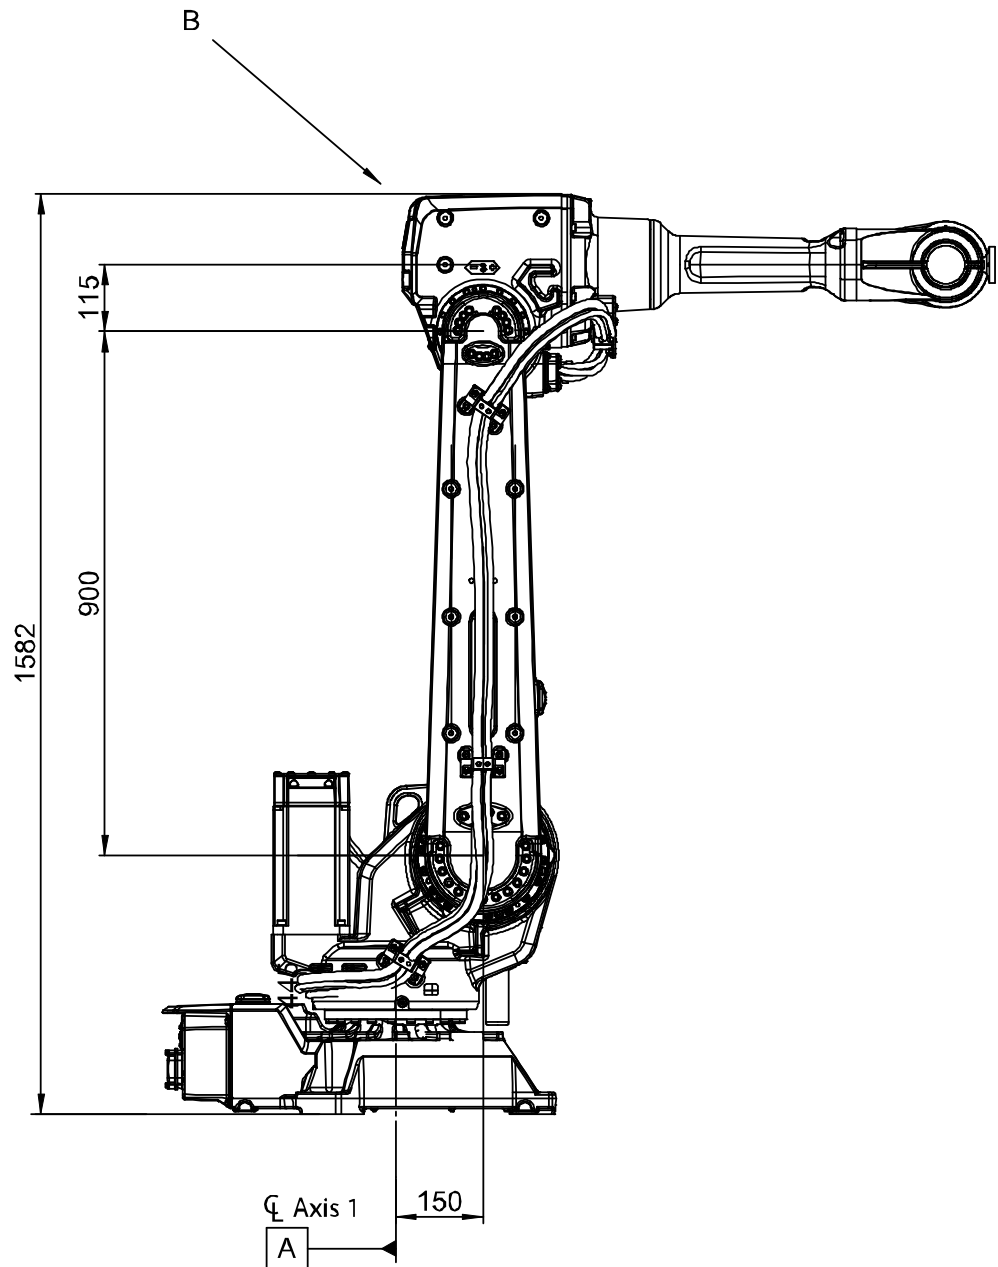

xx0900000680

Pos	Description
B	For all other dimensions see IRB 2600-20(12)/1.65


*Continues on next page*

# 1 Description

## 1.1.2 Different robot versions

*Continued*

### Dimensions IRB 2600ID-15/1.85

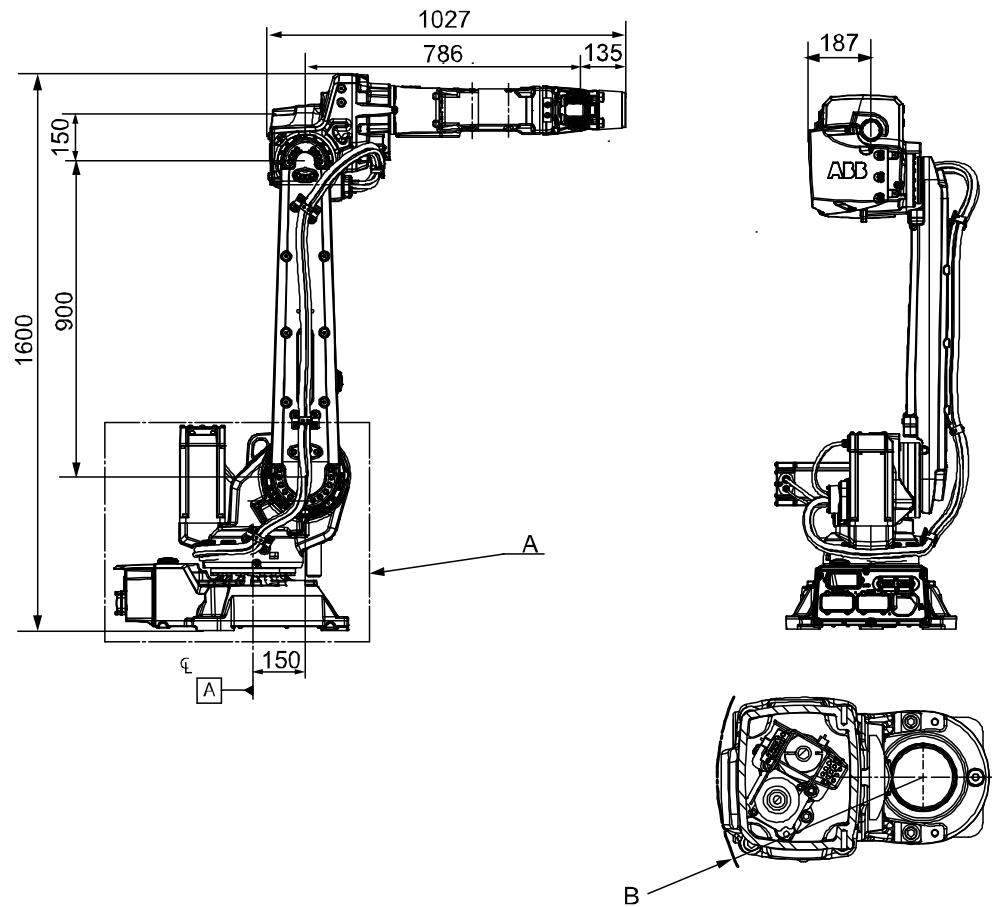


xx1000000962

Pos	Description
A	For dimensions, see IRB 2600-X/1.85
B	R 172 Minimum turning radius for axis 4

*Continues on next page*

### Dimensions IRB 2600ID-8/2.00

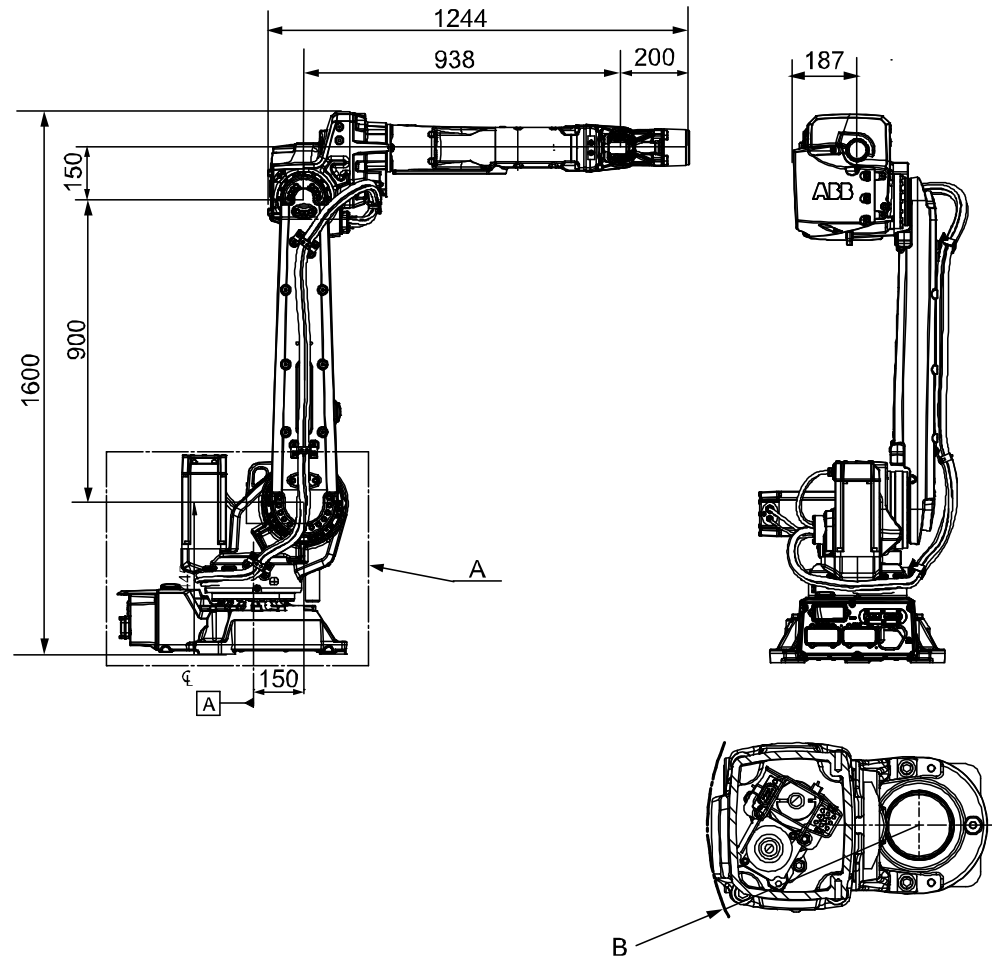

xx1000000963

Pos	Description
A	For dimensions, see IRB 2600-X/1.85
B	R 172 Minimum turning radius for axis 4

# 1 Description

## 1.2.1 Applicable standards

## 1.2 Standards

### 1.2.1 Applicable standards



#### Note

The listed standards are valid at the time of the release of this document. Phased out or replaced standards are removed from the list when needed.

### Standards, EN ISO

The product is designed in accordance with the requirements of:

Standard	Description
EN ISO 12100:2010	Safety of machinery - General principles for design - Risk assessment and risk reduction
EN ISO 13849-1:2015	Safety of machinery, safety related parts of control systems - Part 1: General principles for design
EN ISO 13850:2015	Safety of machinery - Emergency stop - Principles for design
EN ISO 10218-1:2011	Robots for industrial environments - Safety requirements -Part 1 Robot
ISO 9787:2013	Robots and robotic devices -- Coordinate systems and motion nomenclatures
ISO 9283:1998	Manipulating industrial robots, performance criteria, and related test methods
EN ISO 14644-1:2015 <sup>i</sup>	Classification of air cleanliness
EN ISO 13732-1:2008	Ergonomics of the thermal environment - Part 1
EN 61000-6-4:2007 + A1:2011 IEC 61000-6-4:2006 + A1:2010 (option 129-1)	EMC, Generic emission
EN 61000-6-2:2005 IEC 61000-6-2:2005	EMC, Generic immunity
EN IEC 60974-1:2012 <sup>ii</sup>	Arc welding equipment - Part 1: Welding power sources
EN IEC 60974-10:2014 <sup>ii</sup>	Arc welding equipment - Part 10: EMC requirements
EN IEC 60204-1:2006	Safety of machinery - Electrical equipment of machines - Part 1 General requirements
IEC 60529:1989 + A2:2013	Degrees of protection provided by enclosures (IP code)

<sup>i</sup> Only robots with protection Clean Room.

<sup>ii</sup> Only valid for arc welding robots. Replaces EN IEC 61000-6-4 for arc welding robots.

### European standards

Standard	Description
EN 614-1:2006 + A1:2009	Safety of machinery - Ergonomic design principles - Part 1: Terminology and general principles

*Continues on next page*

Standard	Description
EN 574:1996 + A1:2008	Safety of machinery - Two-hand control devices - Functional aspects - Principles for design

#### Other standards

Standard	Description
ANSI/RIA R15.06	Safety requirements for industrial robots and robot systems
ANSI/UL 1740	Safety standard for robots and robotic equipment
CAN/CSA Z 434-14	Industrial robots and robot Systems - General safety requirements

# 1 Description

---

## 1.3.1 Introduction to installation

## 1.3 Installation

### 1.3.1 Introduction to installation

---

#### General

The IRB 2600/IRB 2600 ID is designed for floor, wall, tilted (up to 45 degrees, around the Y-axis or X-axis, for more details see *Product manual - IRB 2600*, also valid for inverted robot) or inverted mounting. Depending on the robot version, an end effector with max. weight of 12 or 20 kg including payload, can be mounted on the tool flange (axis 6). See [Load diagrams on page 31](#), and [Introduction to Robot Motion on page 54](#) for limitations.

---

#### Extra loads

Extra loads, which are included in the load diagrams, can be mounted on the upper arm. An extra load of 35 kg can also be mounted on the frame of axis 1. See [Information about mounting equipment on page 44](#).

---

#### Working range limitations

The working range of axis 1 can be limited by mechanical stops as option. The option Electronic Position Switches can also be used on all axes for position indication of the manipulator.



## 1.3.2 Operating requirements

### Protection standards

Robot version		Protection Standard IEC60529
Standard manipulator		IP 67
Foundry Plus 2		IP 67
IRB 2600ID-15(8)/1.85(2.00)	Base + lower arm + wrist	IP 67
	Axis 4	IP 54

### Explosive environments

The robot must not be located or operated in an explosive environment.

### Ambient temperature

Description	Standard/Option	Temperature
Manipulator during operation	Standard	+ 5 °C <sup>i</sup> (41 °F) to + 45 °C (113 °F)
For the controller	Standard/Option	See <i>Product specification - Controller IRC5 with FlexPendant</i>
Complete robot during transportation and storage	Standard	- 25 °C (- 13 °F) to + 55 °C (131 °F)
For short periods (not exceeding 24 hours)	Standard	up to + 70 °C (158 °F)

<sup>i</sup> At low environmental temperature < 10 °C is, as with any other machine, a warm-up phase is recommended to be run with the robot. Otherwise there is a risk that the robot stops or run with lower performance due to temperature dependent oil- and grease viscosity.

### Relative humidity

Description	Relative humidity
Complete robot during operation, transportation and storage	Max. 95% at constant temperature

# 1 Description

## 1.3.3 Mounting the manipulator

### 1.3.3 Mounting the manipulator

#### Maximum load

Maximum load in relation to the base coordinate system

#### Floor mounted

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	±2330 N	±5450 N
Force z	2750 ±1420 N	2750 ±3970 N
Torque xy	±3360 Nm	±7690 Nm
Torque z	±1120 Nm	±3050 Nm

#### Wall mounted

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	2750 ±880 N	2750 ±4600 N
Force z	±1780 N	±4560 N
Torque xy	1470 ±1990 Nm	1470 ±5620 Nm
Torque z	±1150 Nm	±3130 Nm

#### Suspended mounting

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	±2250 N <sup>i</sup>	±5380 N <sup>i</sup>
Force z	-2750 ±1420 N <sup>i</sup>	-2750 ±4280 N <sup>i</sup>
Torque xy	±3440 Nm <sup>i</sup>	±7800 Nm <sup>i</sup>
Torque z	±1110 Nm <sup>i</sup>	±3050 Nm <sup>i</sup>

<sup>i</sup> Only valid for IRB 2600-20/1.65, IRB 2600-12/1.65, IRB 2600-12/1.85, IRB 2600ID-15/1.85, IRB 2600ID-8/2.0.

IRB 2600 Type C-20/1.65, IRB 2600 Type C-12/1.65 is not available for suspended installation.


#### Tilted mounting

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	±2563 N	±5995 N
Force z	3025 ±4367 N	3025 ±4367 N
Torque xy	±3696 Nm	±8459 Nm
Torque z	±1232 Nm	±3355 Nm

Continues on next page


### Illustration

The figures below shows IRB 2600 Standard but are also valid for IRB 2600ID.

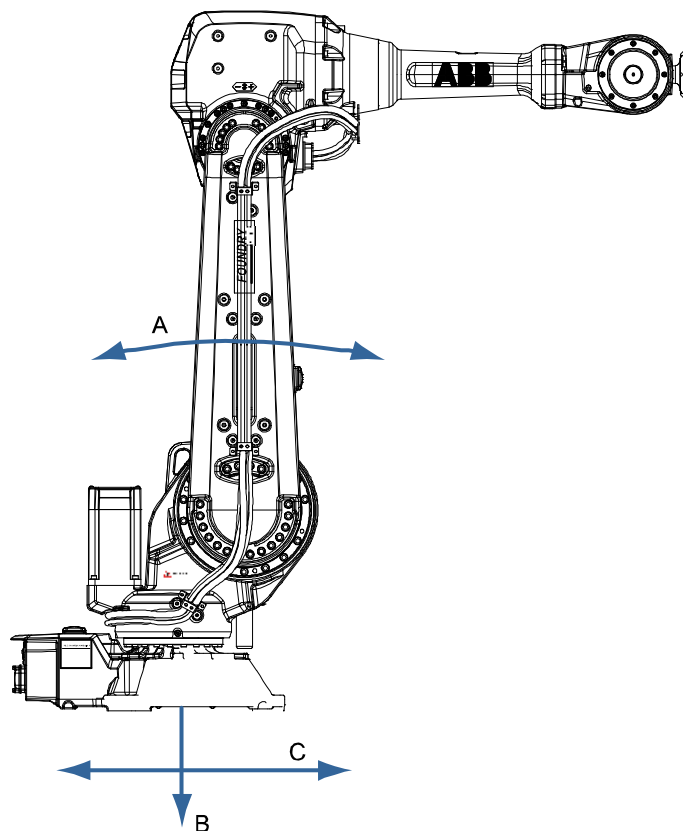

xx0900000056

A	Torque <sub>xy</sub> ( $T_{xy}$ )
B	Force <sub>z</sub> ( $F_z$ )
C	Force <sub>xy</sub> ( $F_{xy}$ )

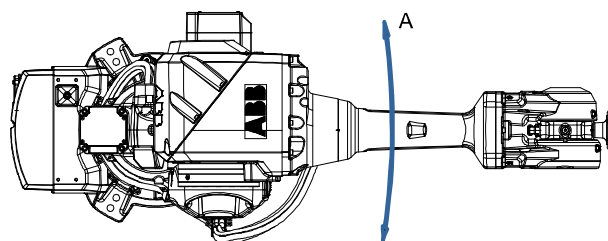

xx0900000057

A	Torque <sub>z</sub> ( $T_z$ )
---	-------------------------------

### Note regarding $M_{xy}$ and $F_{xy}$

The bending torque ( $M_{xy}$ ) can occur in any direction in the XY-plane of the base coordinate system. The same applies to the transverse force ( $F_{xy}$ ).


*Continues on next page*



## 1 Description

### 1.3.3 Mounting the manipulator

Continued

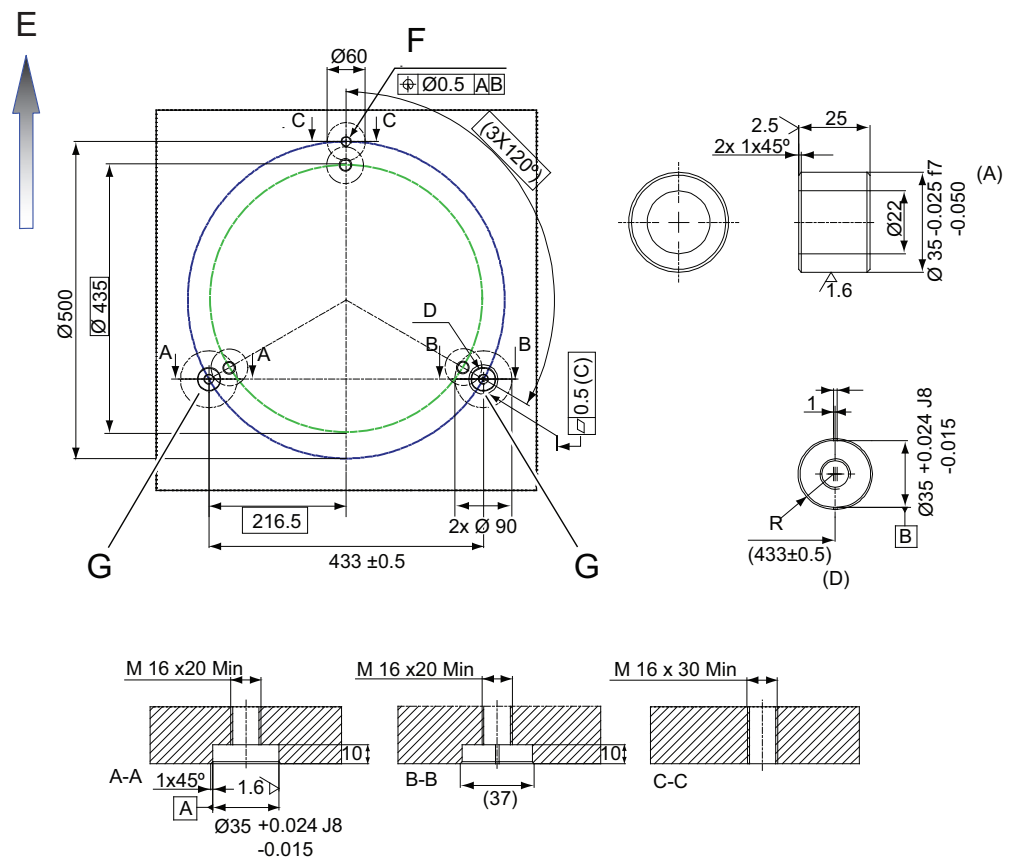

xx0900000392

Pos	Description
(C)	3x common zone
E	Position of the front of the robot
F	1xM16, depth 30 minimum
G	Guide sleeves (2 pcs)

# 1 Description


## 1.4.1 Fine calibration

## 1.4 Calibration and references

### 1.4.1 Fine calibration

#### General

Fine calibration is made using the Calibration Pendulum, see *Operating manual - Calibration Pendulum*.

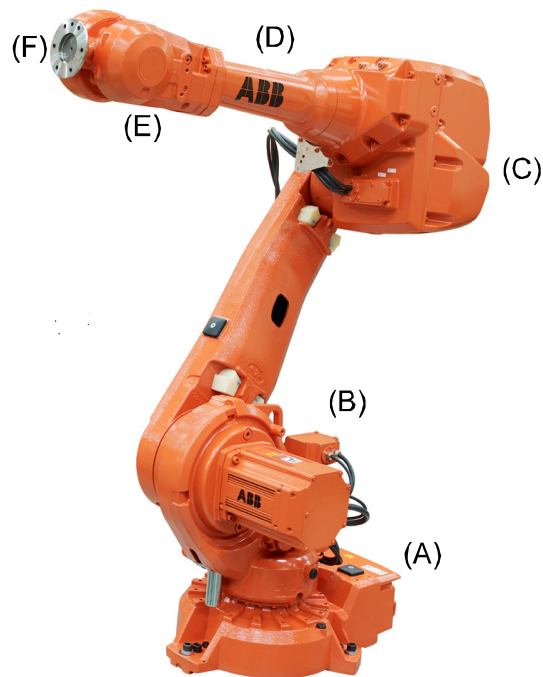

xx0800000437

Pos	Description	Pos	Description
A	Axis 1	B	Axis 2
C	Axis 3	D	Axis 4
E	Axis 5	F	Axis 6

#### Calibration

Calibration	Position
Calibration of all axes	All axes are in zero position
Calibration of axis 1 and 2	Axis 1 and 2 in zero position
	Axis 3 to 6 in any position
Calibration of axis 1	Axis 1 in zero position
	Axis 2 to 6 in any position

### 1.4.2 Absolute Accuracy calibration

---

#### Prerequisites

Requires RobotWare option Absolute Accuracy, see *Product specification - Controller software IRC5*.

---

#### The calibration concept

Absolute Accuracy (AbsAcc) is a calibration concept, that ensures a TCP absolute accuracy of better than  $\pm 1$  mm in the entire working range (working range of serial link robots such as IRB 2600, are limited to only forward positions).

Absolute Accuracy compensates for:

- Mechanical tolerances in the robot structure
- Deflection due to load

Absolute Accuracy calibration is focusing on positioning accuracy in the cartesian coordinate system for the robot. It also includes load compensation for deflection caused by the tool and equipment. Tool data from robot program is used for this purpose. The positioning will be within specified performance regardless of load.

---

#### Calibration data

The user is supplied with robot calibration data (compensation parameter file, absacc.cfg) and a certificate that shows the performance ("birth certificate"). The difference between an ideal robot and a real robot without Absolute Accuracy may reach up to 8 mm, resulting from mechanical tolerances and deflection in the robot structure.

*Continues on next page*


# 1 Description

## 1.4.2 Absolute Accuracy calibration

*Continued*

### Absolute Accuracy option

The Absolute Accuracy option is integrated in the controller algorithms for compensation of the difference between the ideal and the real robot, and does not need external equipment or calculation. Absolute Accuracy is a RobotWare option and includes an individual calibration of the robot (mechanical arm). Absolute Accuracy is a TCP calibration to reach a good positioning in the Cartesian coordinate system.

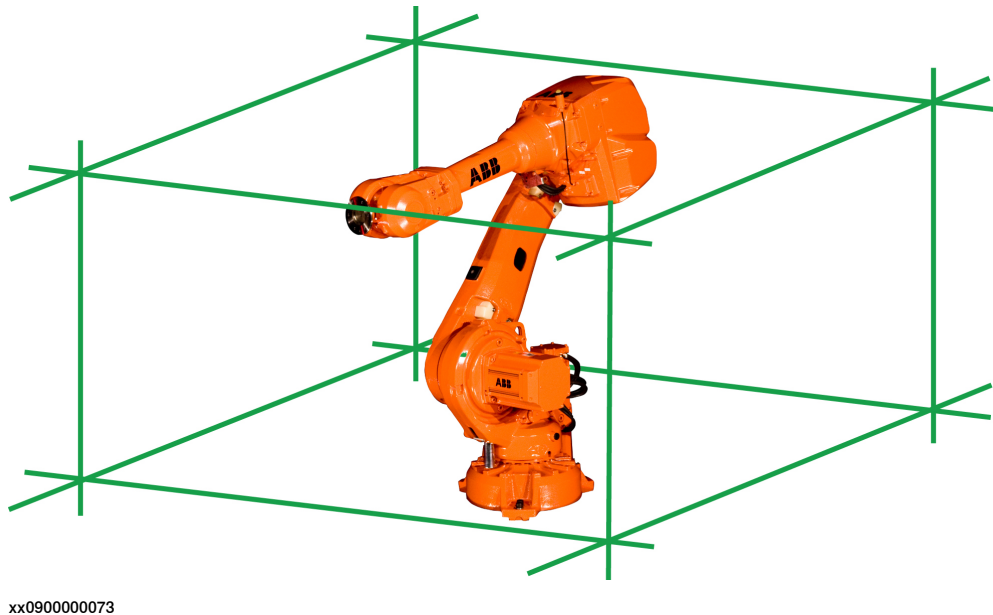

xx0900000073

### Product data

Typical production data regarding calibration are:

Robot	Positioning accuracy (mm)		
	Average	Max	% Within 1 mm
IRB 2600-20/1.65	0.25	0.65	100
IRB 2600-12/1.65	0.25	0.65	100
IRB 2600-12/1.85	0.25	0.65	100
IRB 2600ID-15/1.85	0.25	0.65	100
IRB 2600ID-8/2.00	0.35	0.85	100

a. Data yet not available.



## 1.5 Robot load and load diagrams

### 1.5.1 Introduction to Robot load and load diagrams

#### Information



#### WARNING

It is very important to always define correct actual load data and correct payload of the robot. Incorrect definitions of load data can result in overloading of the robot.

If incorrect load data and/or loads are outside load diagram is used the following parts can be damaged due to overload:

- motors
- gearboxes
- mechanical structure



#### WARNING

In the robot system the service routine LoadIdentify is available, which allows the user to make an automatic definition of the tool and load, to determine correct load parameters.

See *Operating manual - IRC5 with FlexPendant*, for detailed information.



#### WARNING

Robots running with incorrect load data and/or with loads outside diagram, will not be covered by robot warranty.

#### General

The load diagrams include a nominal payload inertia,  $J_0$  of  $0.2 \text{ kgm}^2$  for all variants, also extra load at the upper arm housing and wrist are included according to table below. At different moment of inertia the load diagram will be changed. For robots that are allowed tilted, wall or inverted mounted, the load diagrams as given are valid and thus it is also possible to use RobotLoad within those tilt and axis limits.

Robot	Extra arm load	Load at wrist
IRB 2600-20/1.65	10 kg	1 kg
IRB 2600-12/1.65	15 kg	1 kg
IRB 2600-12/1.85	10 kg	1 kg
IRB 2600ID-15/1.85	10 kg	1 kg
IRB 2600ID-8/2.00	15 kg	1 kg

*Continues on next page*

## 1 Description

---

### 1.5.1 Introduction to Robot load and load diagrams

*Continued*

---


#### Control of load case by "RobotLoad"

To easily control a specific load case, use the calculation program ABB RobotLoad. Contact your local ABB organization for more information.

The result from RobotLoad is only valid within the maximum loads and tilt angles. There is no warning if the maximum permitted armload is exceeded. For over load cases and special applications, contact ABB for further analysis.

## 1.5.2 Load diagrams

IRB 2600 - 20/1.65

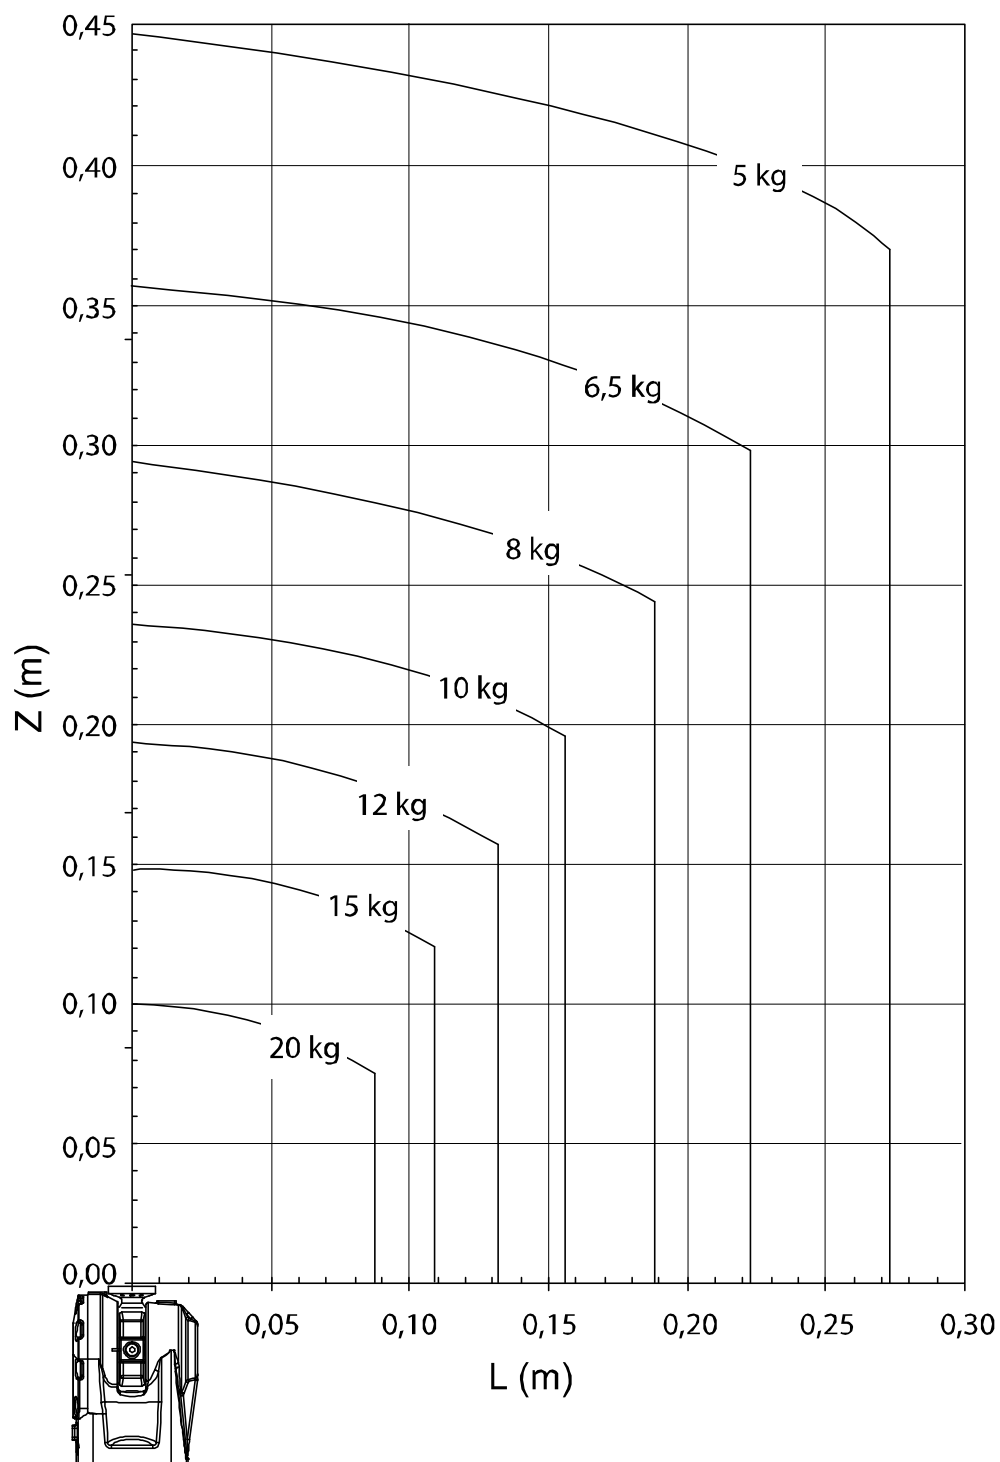

xx0900000701

Extra load of 10 kg at the upper arm housing and 1 kg at wrist included in the load diagram.


Continues on next page

## 1 Description

### 1.5.2 Load diagrams

Continued

#### IRB 2600 - 20/1.65 "Vertical wrist" ( $\pm 10^\circ$ )

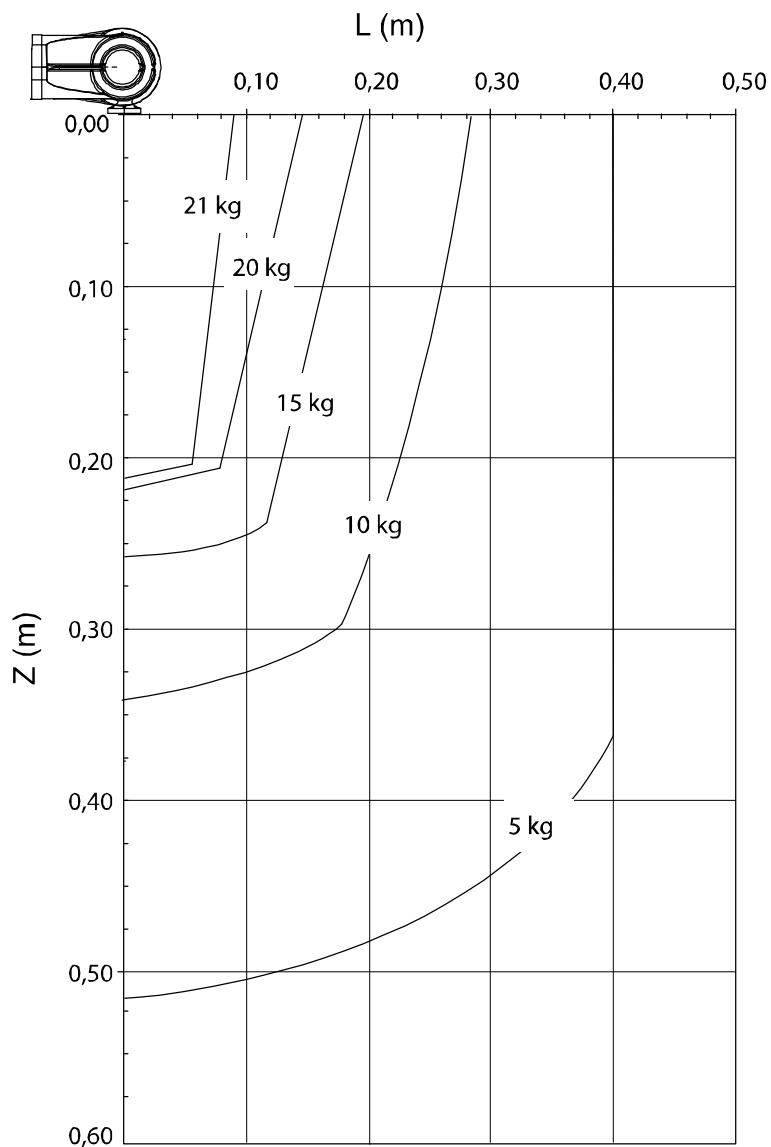

xx0900000725


Extra load of 10 kg at the upper arm housing and 1 kg at wrist included in the load diagram.

For wrist down  $\pm 10^\circ$  deviation from vertical line.

	Description
Max load	22 kg
$Z_{\max}$	0.134 m
$L_{\max}$	0.031 m

Continues on next page

## IRB 2600 - 12/1.65

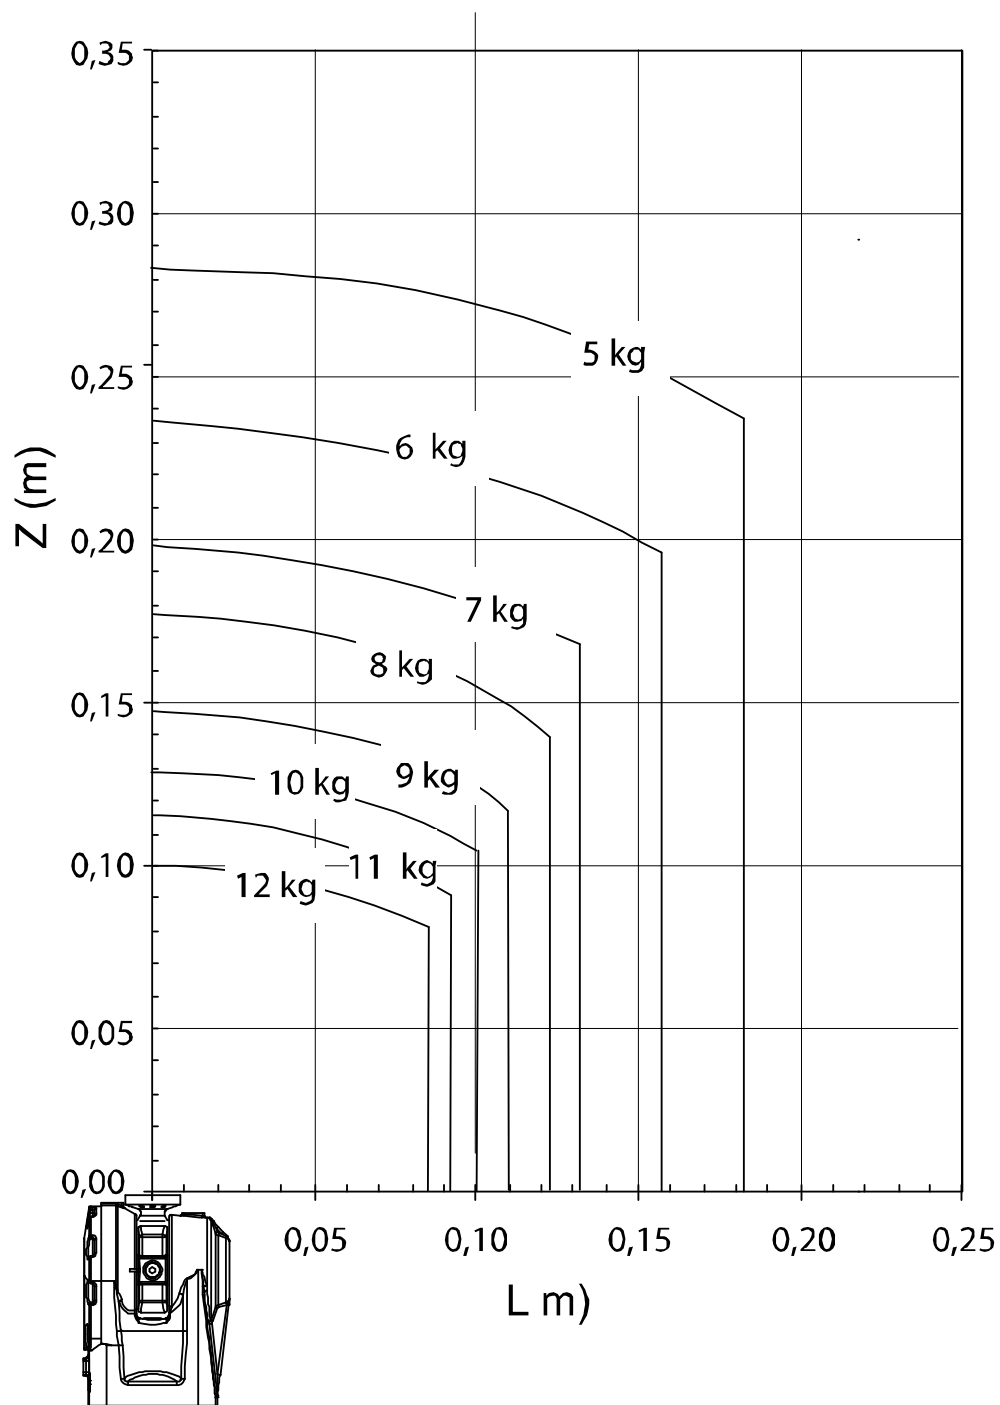

xx0900000726

Extra load of 15 kg at the upper arm housing and 1 kg at wrist included in the load diagram.

Load diagram "Vertical wrist" is not available for IRB 2600-12/1.65.


Continues on next page

# 1 Description

## 1.5.2 Load diagrams

Continued


IRB 2600 - 12/1.85

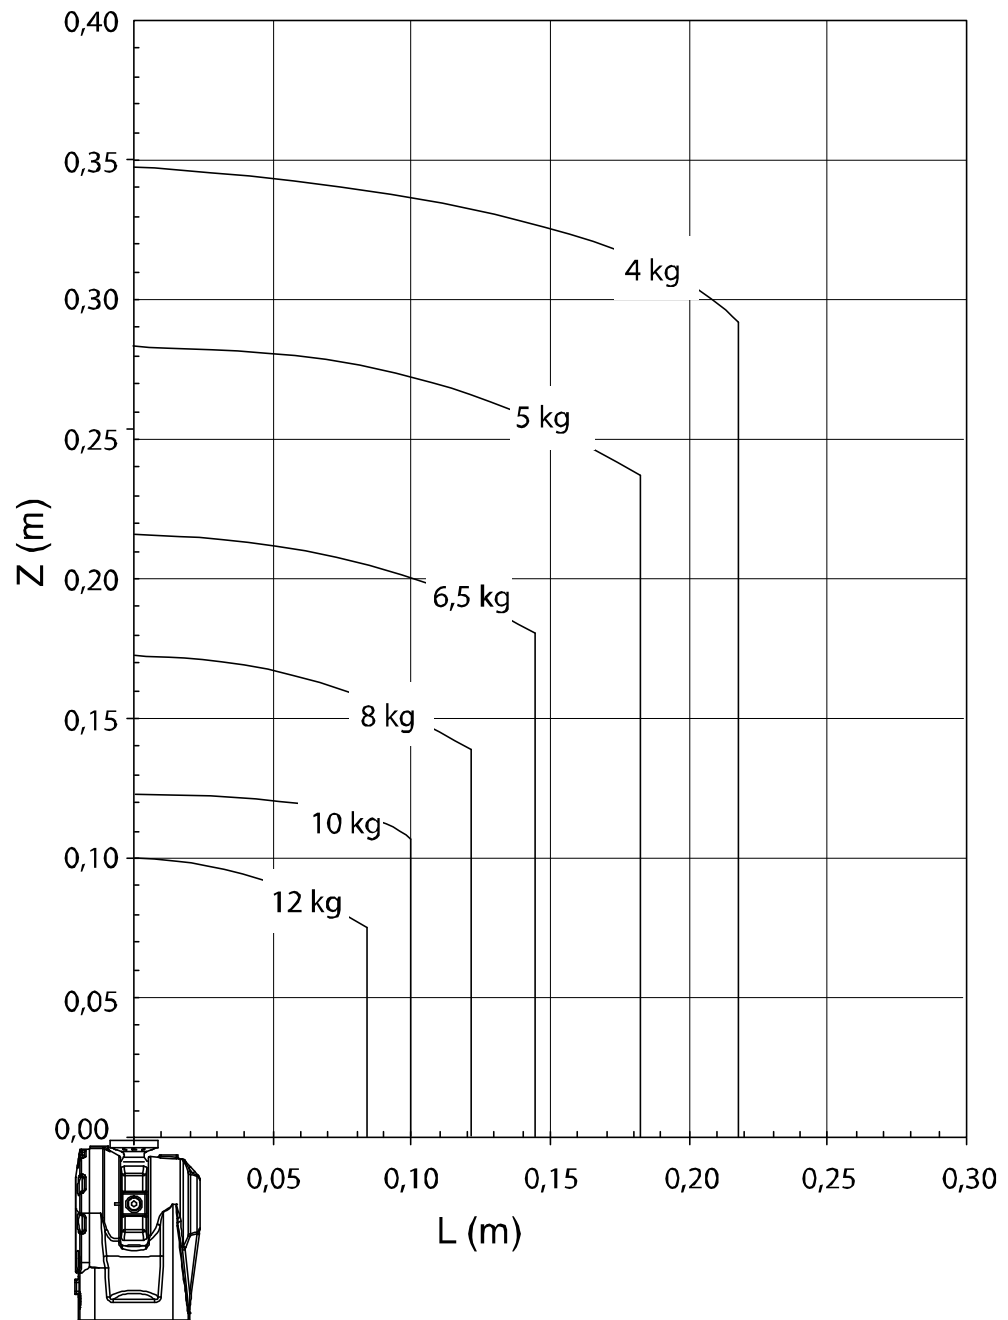

xx0900000708

Extra load of 10 kg at the upper arm housing and 1 kg at wrist included in the load diagram.

Continues on next page

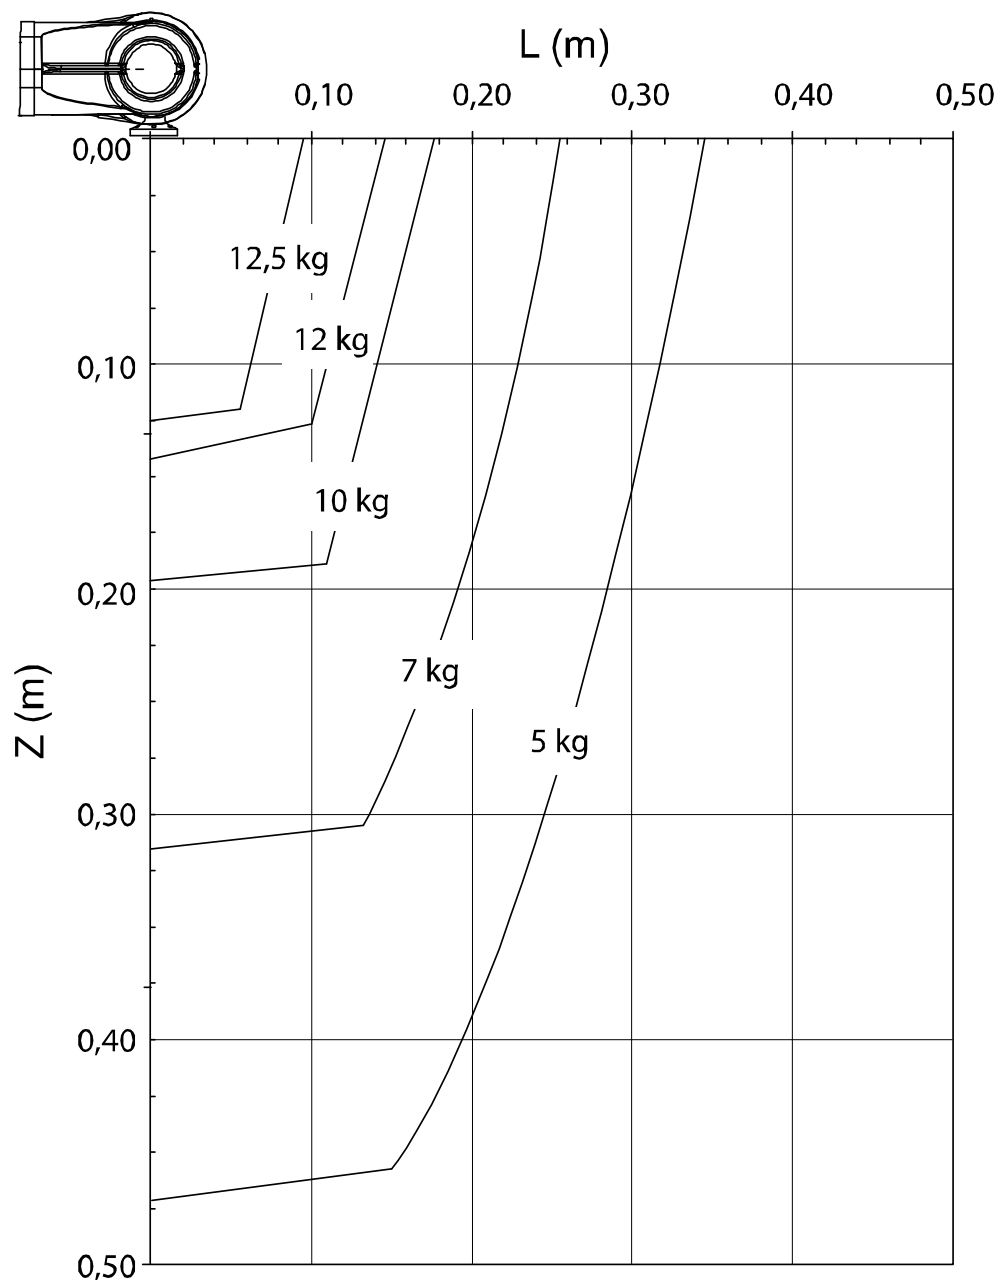IRB 2600 - 12/1.85 "Vertical wrist" ( $\pm 10^\circ$ )

xx0900000709

Extra load of 10 kg at the upper arm housing and 1 kg at wrist included in the load diagram.

For wrist down  $\pm 0^\circ$  deviation from vertical line.

	Description
Max load	13 kg
Z <sub>max</sub>	0.131 m
L <sub>max</sub>	0.040 m


Continues on next page

# 1 Description

## 1.5.2 Load diagrams

Continued


IRB 2600ID - 15/1.85

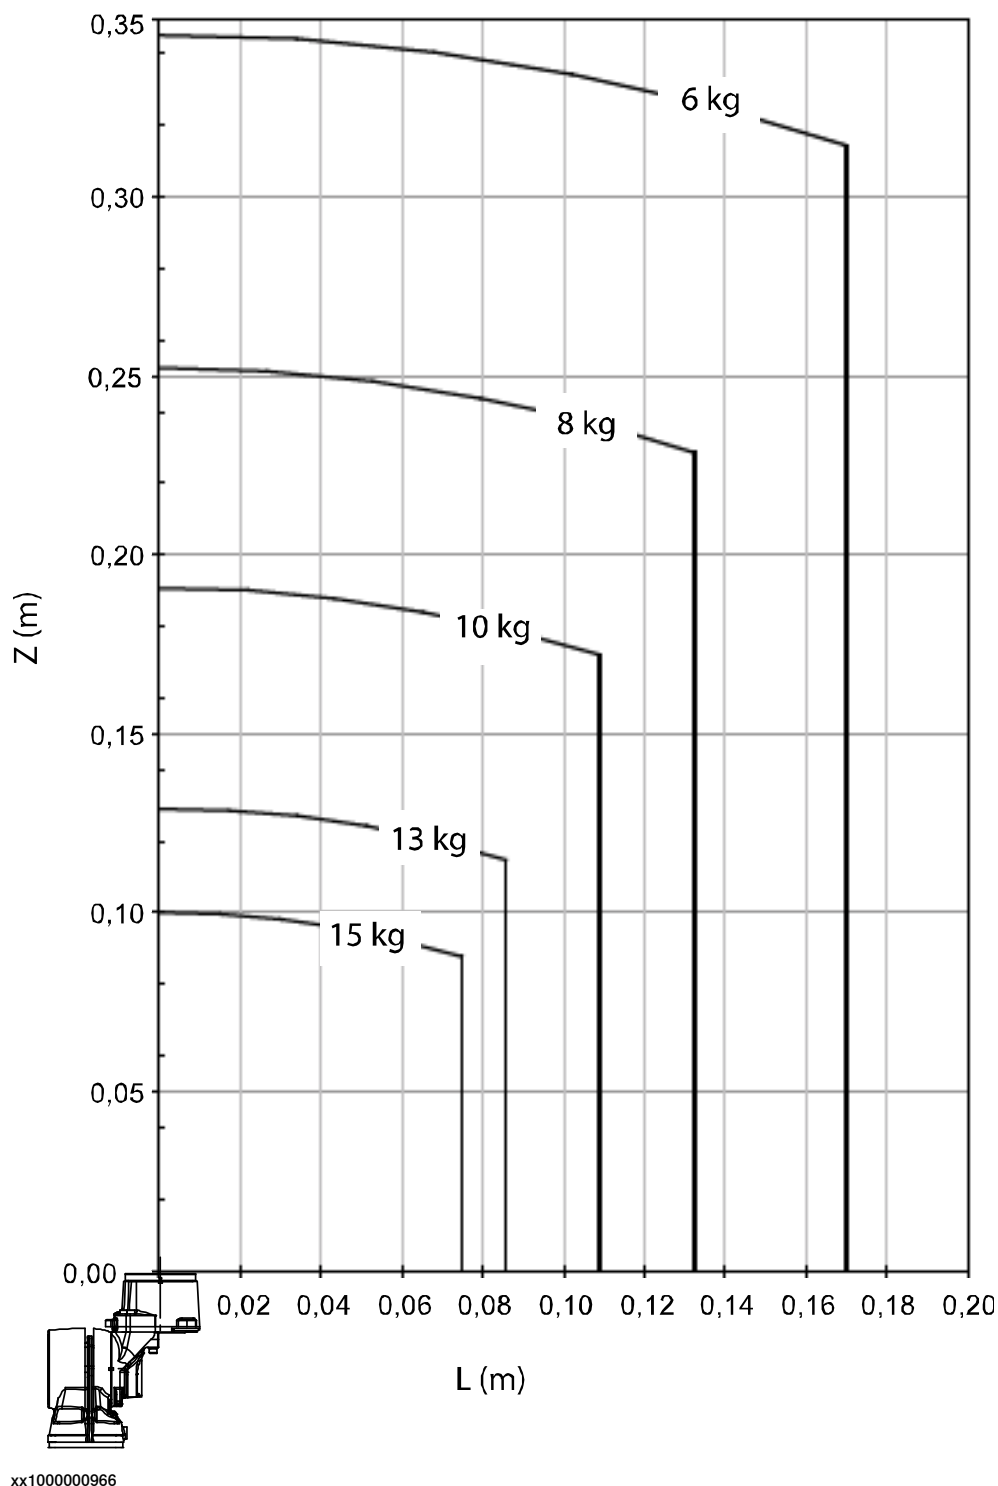

Extra load of 10 kg at upper arm and 1 kg at wrist included in the load diagram.

Continues on next page

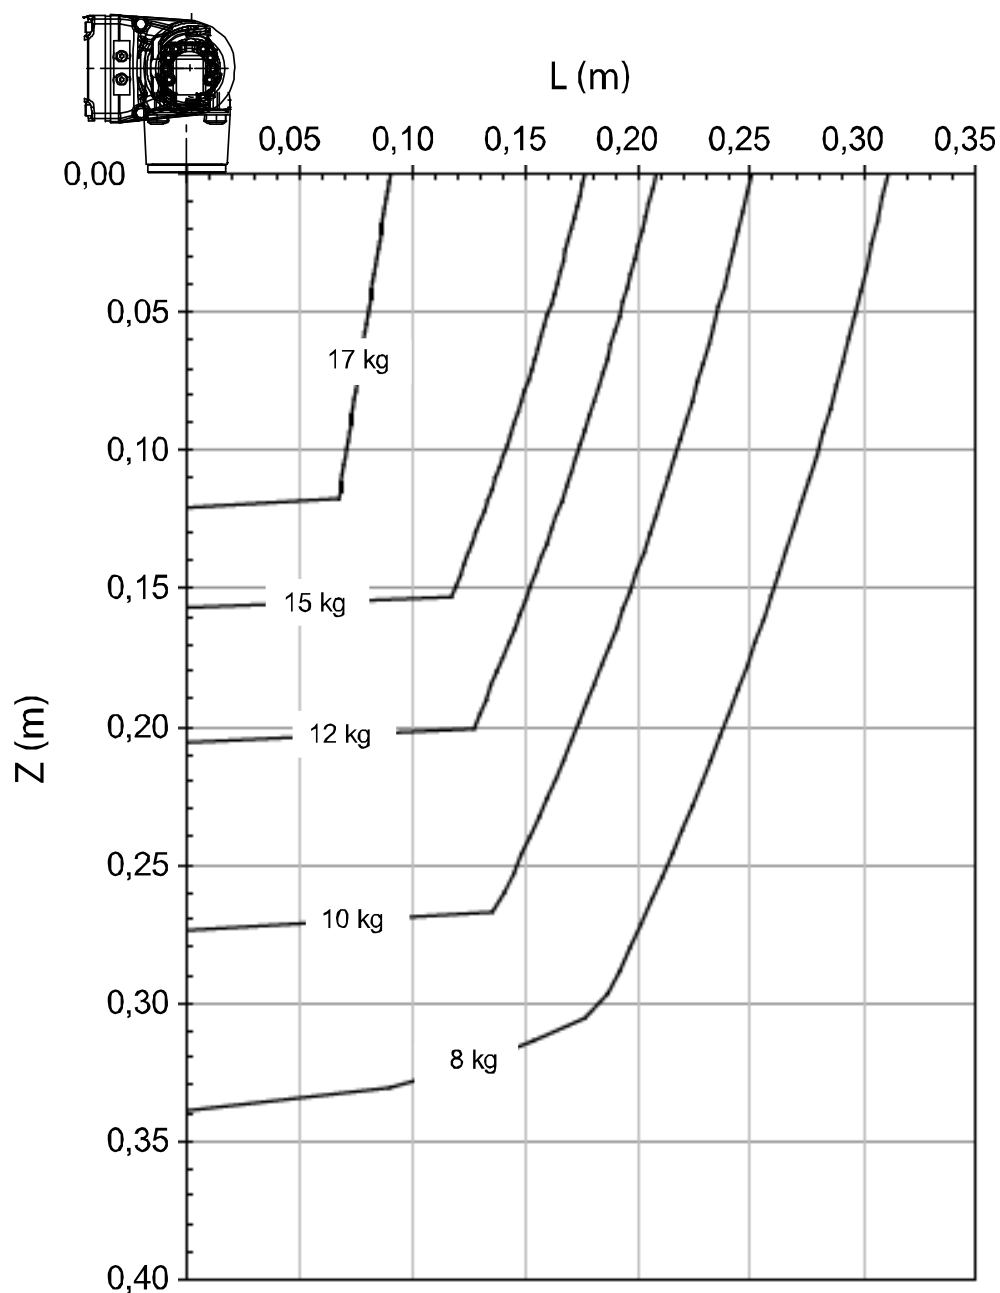

IRB 2600ID-15/1.85 "Vertical wrist" ( $\pm 10^\circ$ )

xx1000000976

Extra load of 10 kg at the upper arm housing and 1 kg at wrist included in the load diagram.

For wrist down  $\pm 10^\circ$  deviation from the vertical line.

	Description
Max load	16.5 kg
$Z_{\max}$	0.113 m
$L_{\max}$	0.057 m


Continues on next page

# 1 Description

## 1.5.2 Load diagrams

Continued


IRB 2600ID - 8/2.00

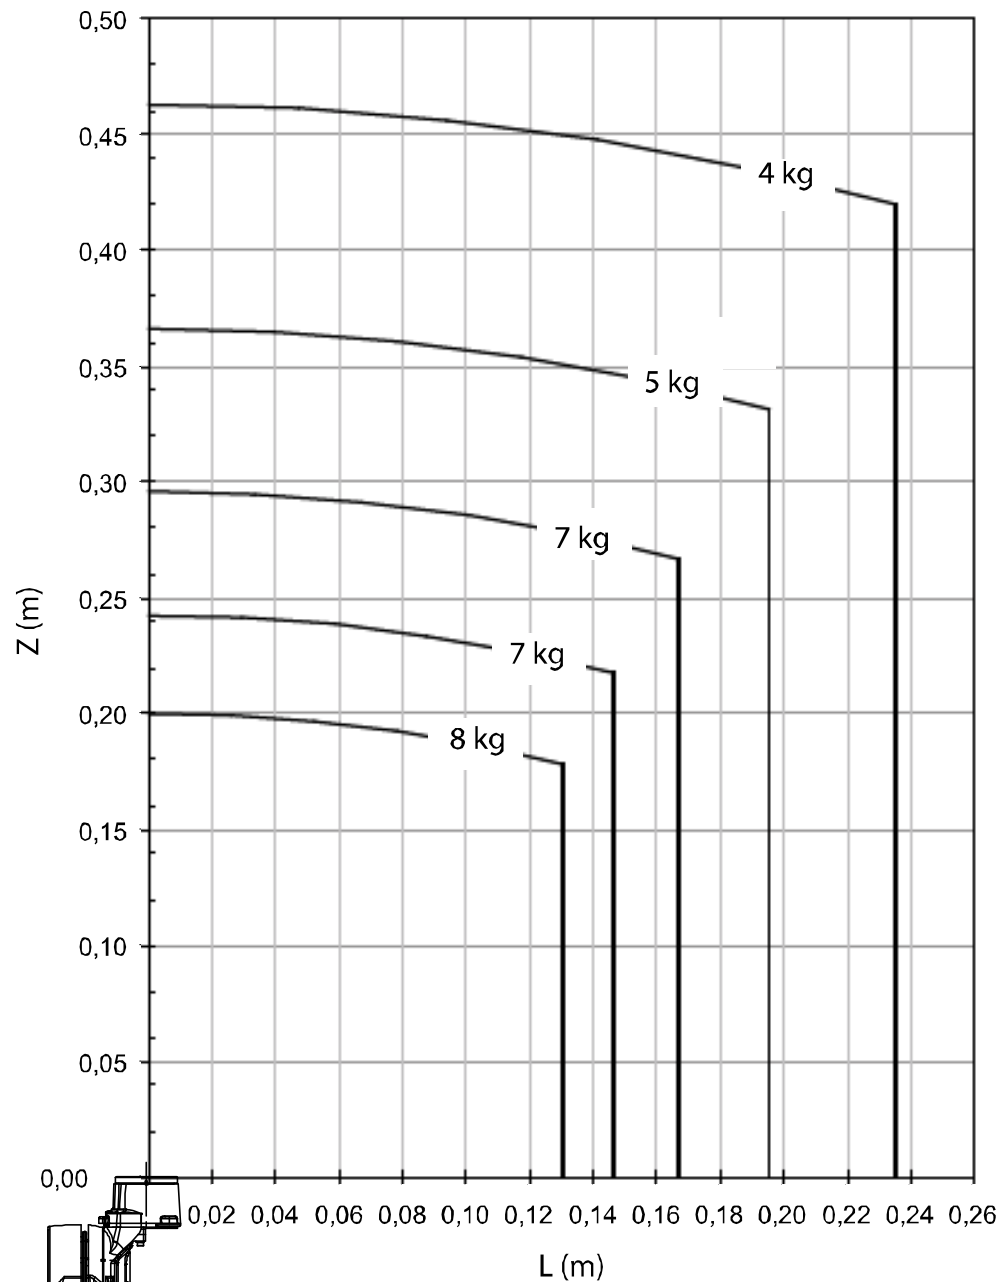

xx1000000967

Extra load of 15 kg at the upper arm housing and 1 kg at wrist included in the load diagram.

Continues on next page

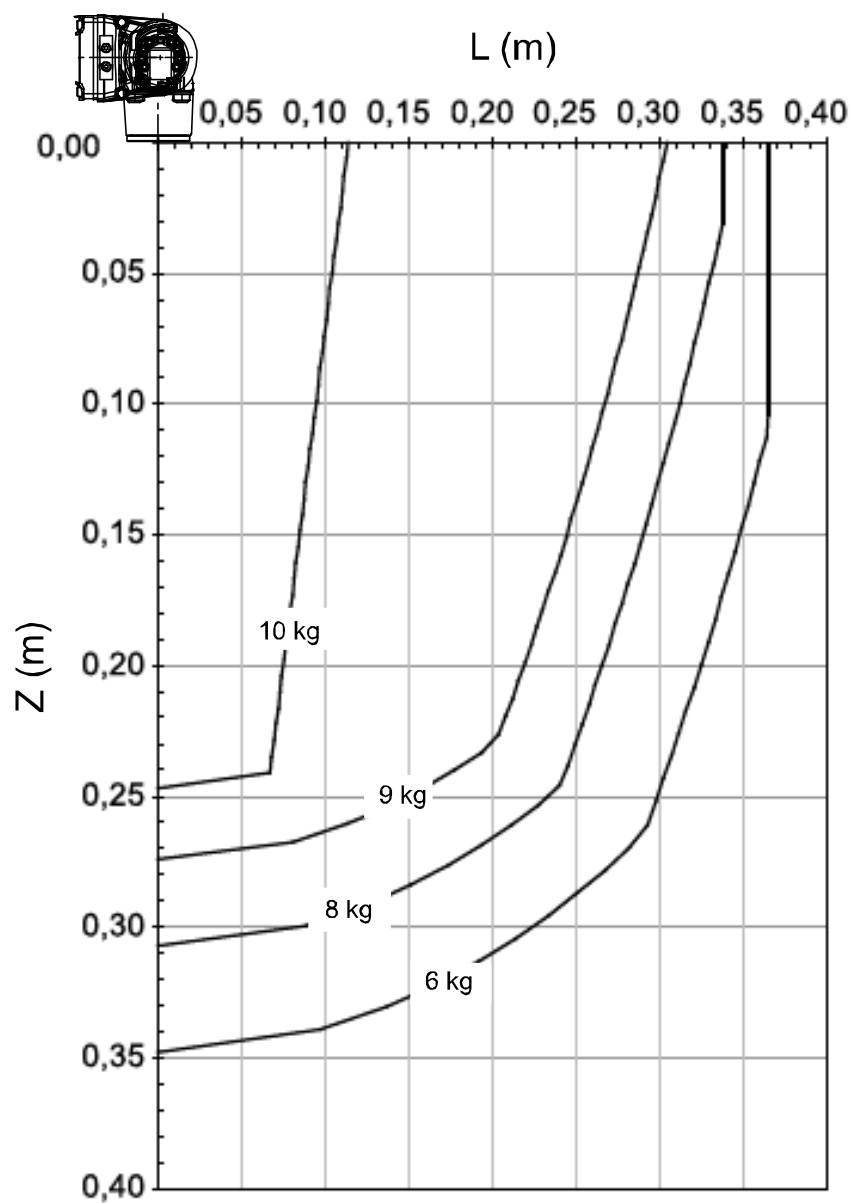IRB 2600ID-8/2.00 "Vertical Wrist" ( $\pm 10^\circ$ )

xx1000000977

Extra load of 15 kg at upper arm and 1 kg at wrist included in the load diagram.  
For wrist down  $\pm 0^\circ$  deviation from the vertical line.

	Description
Max load	9.5 kg
$Z_{\max}$	0.235 m
$L_{\max}$	0.041 m

## 1 Description

### 1.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement

### 1.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement




#### Note

Total load given as: Mass in kg, center of gravity (Z and L) in meter and moment of inertia ( $J_{ox}$   $J_{oy}$   $J_{oz}$ ) in  $\text{kgm}^2$ .  $L = \sqrt{x^2 + y^2}$ .

#### Full movement of axis 5 ( $\pm 120^\circ$ )

Axis	Robot Type	Maximum moment of inertia
5	-20/1.65	$Ja5 = \text{Load} \times ((Z + 0,085)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 2.0 \text{ kgm}^2$
	-12/1.65	$Ja5 = \text{Load} \times ((Z + 0,085)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 2.0 \text{ kgm}^2$
	-12/1.85	$Ja5 = \text{Load} \times ((Z + 0,085)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 2.0 \text{ kgm}^2$
	ID-15/1.85	$Ja5 = \text{Load} \times ((Z + 0,135)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 2.0 \text{ kgm}^2$
	ID-8/2.00	$Ja5 = \text{Load} \times ((Z + 0,2)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 2.0 \text{ kgm}^2$
6	-20/1.65	$Ja6 = \text{Load} \times L^2 + J_{0z} \leq 1.0 \text{ kgm}^2$
	-12/1.65	$Ja6 = \text{Load} \times L^2 + J_{0z} \leq 1.0 \text{ kgm}^2$
	-12/1.85	$Ja6 = \text{Load} \times L^2 + J_{0z} \leq 1.0 \text{ kgm}^2$
	ID-15/1.85	$Ja6 = \text{Load} \times L^2 + J_{0z} \leq 1.0 \text{ kgm}^2$
	ID-8/2.00	$Ja6 = \text{Load} \times L^2 + J_{0z} \leq 1.0 \text{ kgm}^2$

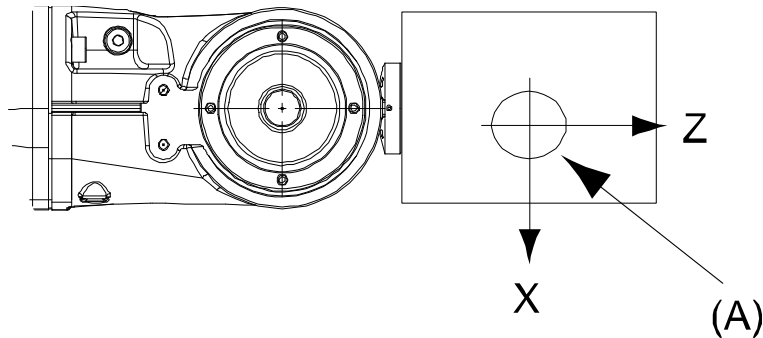

xx0800000458

Pos	Description
A	Center of gravity

	Description
$J_{ox}$ , $J_{oy}$ , $J_{oz}$	Max. moment of inertia around the X, Y and Z axes at center of gravity.


Continues on next page

### 1.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement

*Continued*

#### Limited axis 5, center line down

Axis	Robot Type	Maximum moment of inertia
5	-20/1.65	$Ja5 = \text{Load} \times ((Z + 0,085)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 2.0 \text{ kgm}^2$
	-12/1.65	$Ja5 = \text{Load} \times ((Z + 0,085)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 2.0 \text{ kgm}^2$
	-12/1.85	$Ja5 = \text{Load} \times ((Z + 0,085)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 2.0 \text{ kgm}^2$
	ID-15/1.85	$Ja5 = \text{Load} \times ((Z + 0,135)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 2.0 \text{ kgm}^2$
	ID-8/2.00	$Ja5 = \text{Load} \times ((Z + 0,2)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 2.0 \text{ kgm}^2$
6	-20/1.65	$Ja6 = \text{Load} \times L^2 + J_{0z} \leq 1.0 \text{ kgm}^2$
	-12/1.65	$Ja6 = \text{Load} \times L^2 + J_{0z} \leq 1.0 \text{ kgm}^2$
	-12/1.85	$Ja6 = \text{Load} \times L^2 + J_{0z} \leq 1.0 \text{ kgm}^2$
	ID-15/1.85	$Ja6 = \text{Load} \times L^2 + J_{0z} \leq 1.0 \text{ kgm}^2$
	ID-8/2.00	$Ja6 = \text{Load} \times L^2 + J_{0z} \leq 1.0 \text{ kgm}^2$

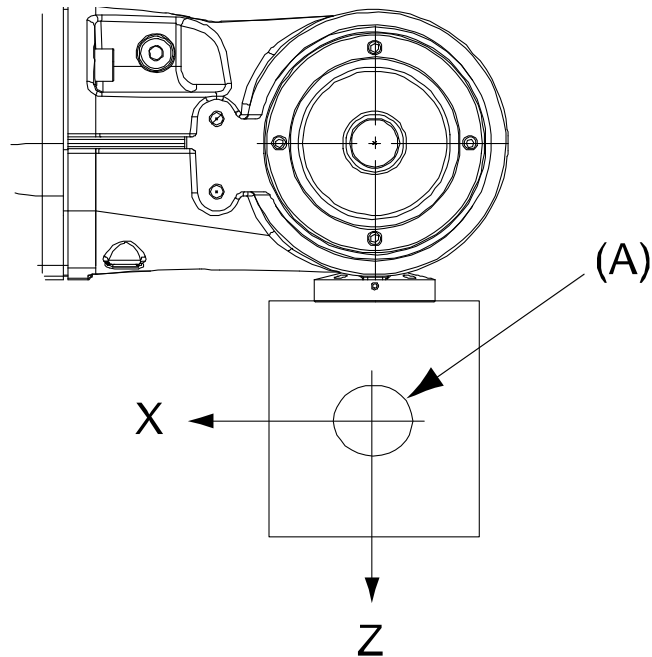

xx0800000459

Pos	Description
A	Center of gravity
Description	
$J_{0x}, J_{0y}, J_{0z}$	Max. moment of inertia around the X, Y and Z axes at center of gravity.

## 1 Description

### 1.5.4 Wrist torque

### 1.5.4 Wrist torque

#### Maximum torque due to payload

The table below shows the maximum permissible torque due to payload:



#### Note

The values are for reference only, and should not be used for calculating permitted load offset (position of center of gravity) within the load diagram, since those also are limited by main axes torques as well as dynamic loads. Also arm loads will influence the permitted load diagram, please contact your local ABB organization.

Robot type	Max wrist torque axis 4 and 5	Max wrist torque axis 6	Max torque valid at load
IRB 2600 - 20/1.65	36.3 Nm	16.7 Nm	20 kg
IRB 2600 - 12/1.65	21.8 Nm	10.0 Nm	12 kg
IRB 2600 - 12/1.85	21.8 Nm	10.0 Nm	12 kg
IRB 2600ID-15/1.85	34.6 Nm	11 Nm	15 kg
IRB 2600ID-8/2.00	31.4 Nm	10.2 Nm	8 kg

## 1.5.5 Maximum TCP acceleration

### General

Higher values can be reached with lower loads than the nominal because of our dynamical motion control QuickMove2. For specific values in the unique customer cycle, or for robots not listed in the table below, we recommend then to use RobotStudio.

### Maximum Cartesian design acceleration for nominal loads

Robot type	E-stop Max acceleration at nominal load COG [m/s <sup>2</sup> ]	Controlled Motion Max acceleration at nominal load COG [m/s <sup>2</sup> ]
IRB 2600 - 20/1.65	94	51
IRB 2600 - 12/1.85	105	68
IRB 2600ID - 15/1.85	104	59
IRB 2600ID - 8/2.0	134	89



#### Note

Acceleration levels for E-stop and controlled motion includes acceleration due to gravitational forces. Nominal load is define with nominal mass and cog with max offset in Z and L (see load diagram).

# 1 Description


## 1.6.1 Information about mounting equipment

## 1.6 Mounting equipment

### 1.6.1 Information about mounting equipment

#### General

Extra loads can be mounted on the wrist, the upper arm housing and on the frame. Definitions of load areas and permitted load are shown in. The center of gravity of the extra load shall be within the marked load areas. The robot is supplied with holes for mounting of extra equipment. (See figures in Holes for mounting of extra equipment.)

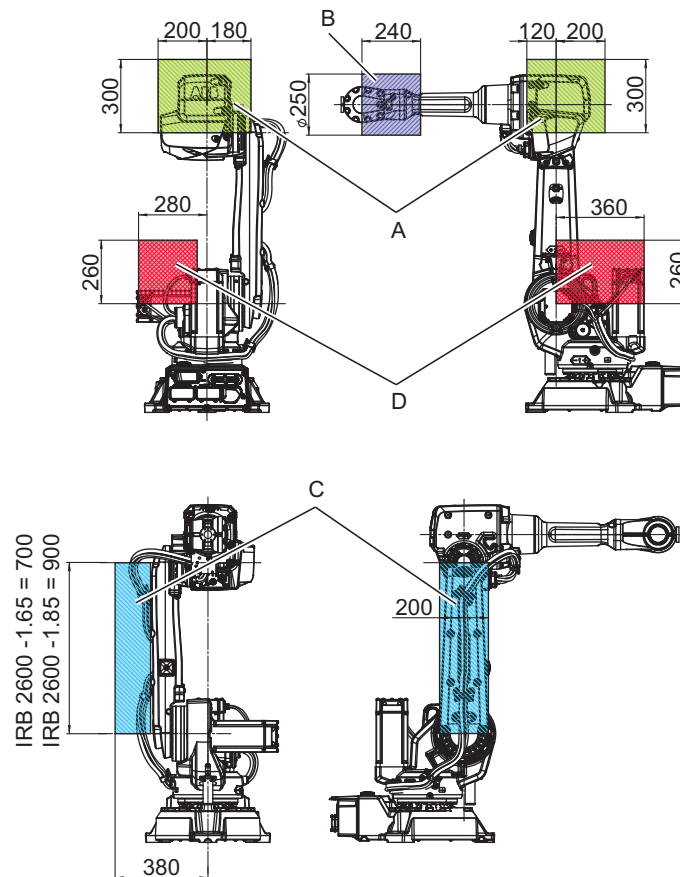

xx0900000189

Load area robot	Max load				
	A	B	C	A+C	D
IRB 2600 - 20/1.65	10 kg	1 kg	10 kg	10 kg	35 kg
IRB 2600 - 12/1.65	15 kg	1 kg	15 kg	15 kg	35 kg
IRB 2600 - 12/1.85	10 kg	1 kg	10 kg	10 kg	35 kg


Continues on next page



# 1 Description

## 1.6.1 Information about mounting equipment

*Continued*

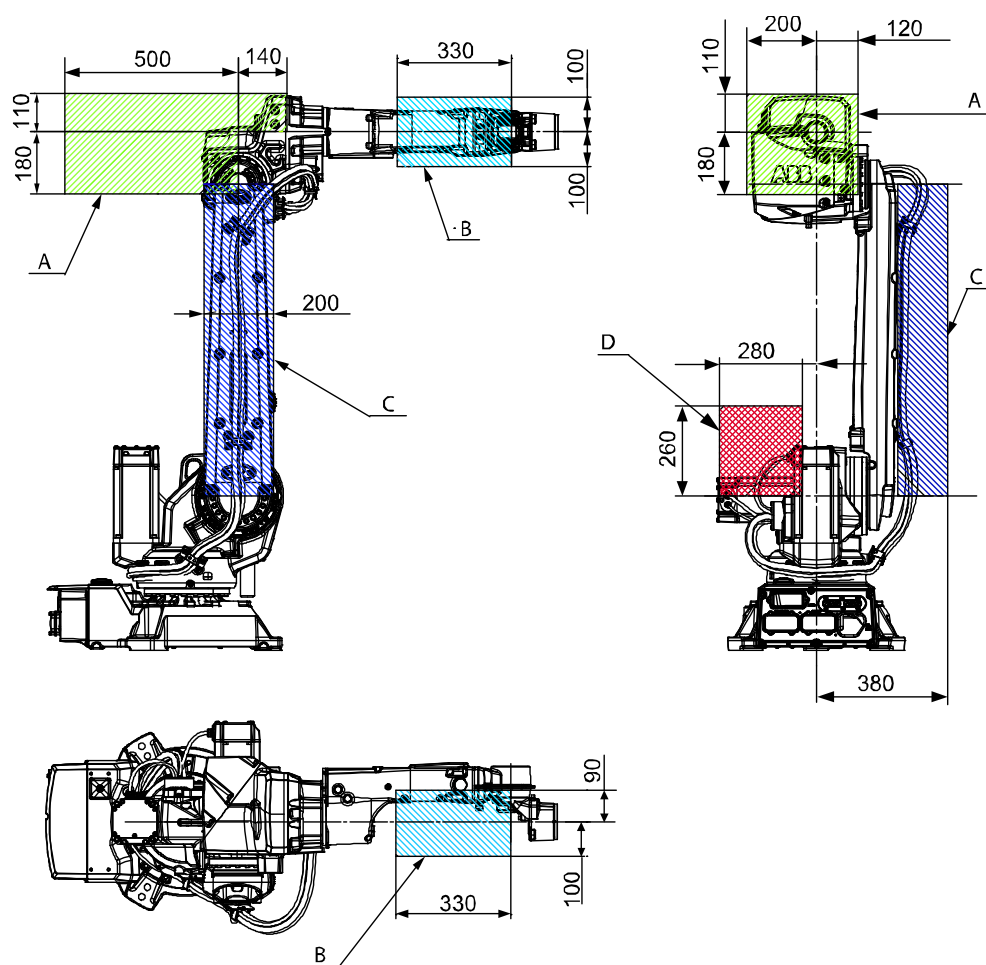

xx1000000978

Load area robot	Max load				
	A	B	C	A+C	D
IRB 2600ID-15/1.85	10 kg	1 kg	10 kg	10 kg	35 kg
IRB 2600ID-8/2.00	10 kg	1 kg	10 kg	15 kg	35 kg



### Note

Maximum loads must never be exceeded!


*Continues on next page*

# 1 Description


## 1.6.1 Information about mounting equipment

Continued


### Holes for mounting of extra equipment

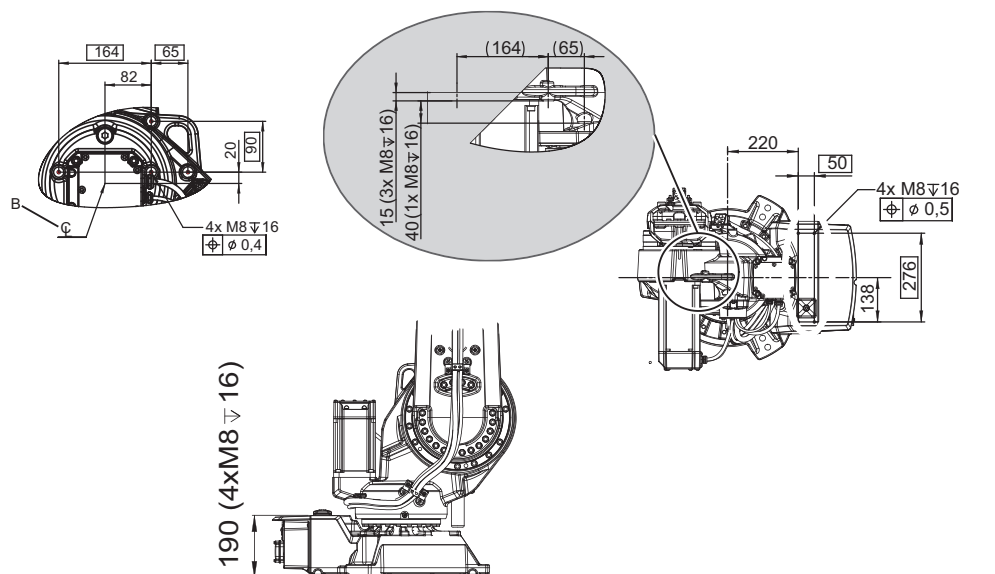

xx0900000484

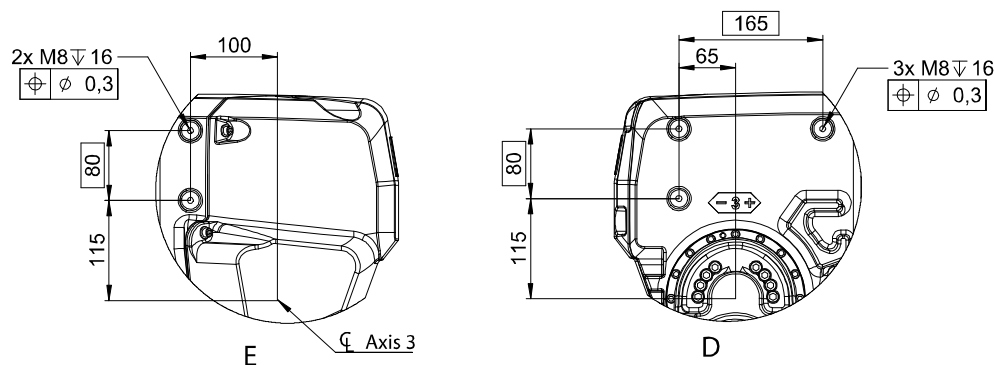


xx0900000485

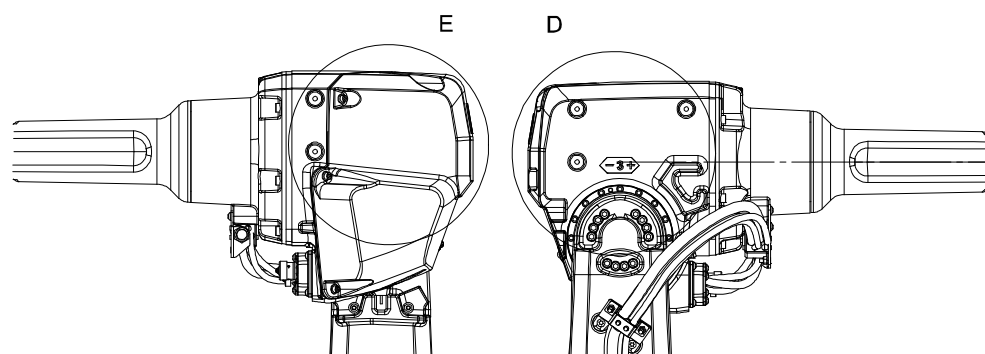

xx0900000486


Continues on next page

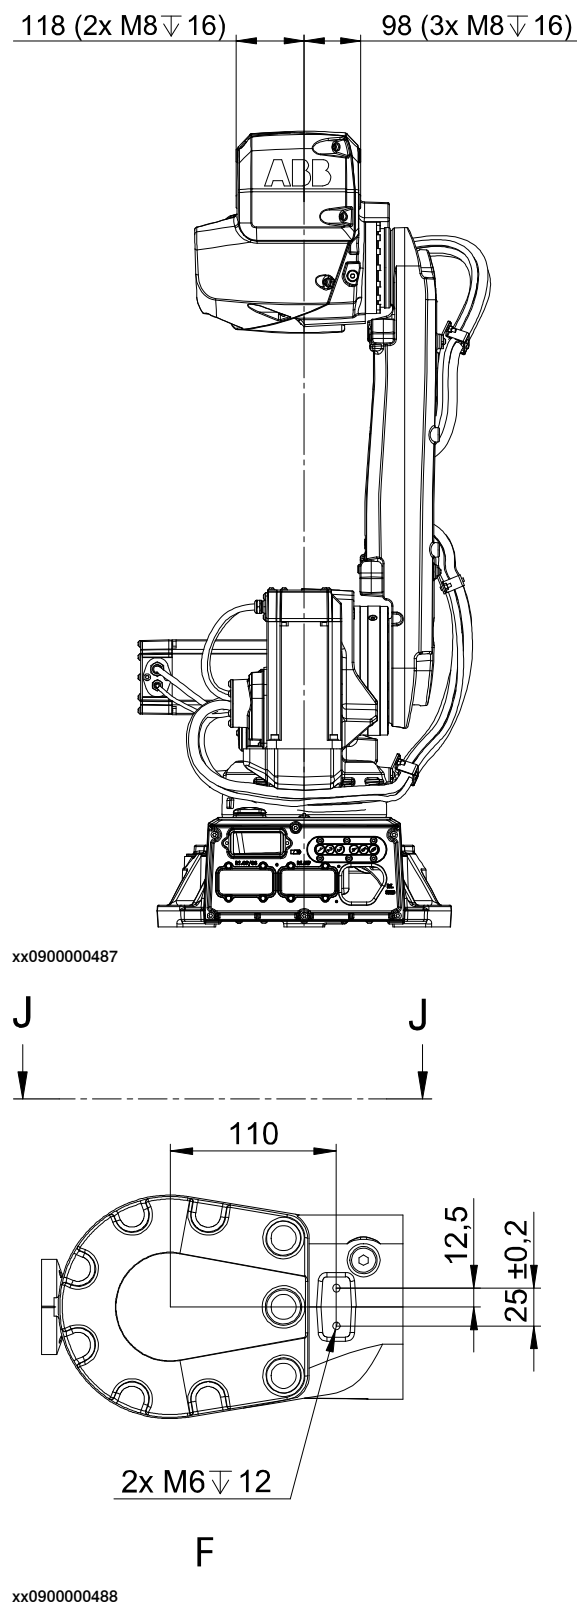


# 1 Description

## 1.6.1 Information about mounting equipment


Continued

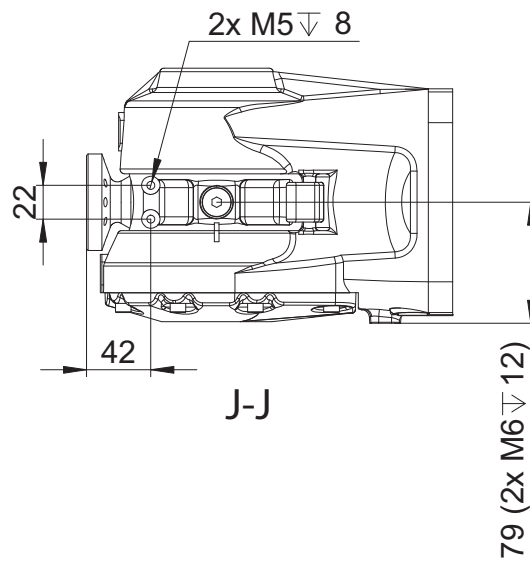

xx0900000489

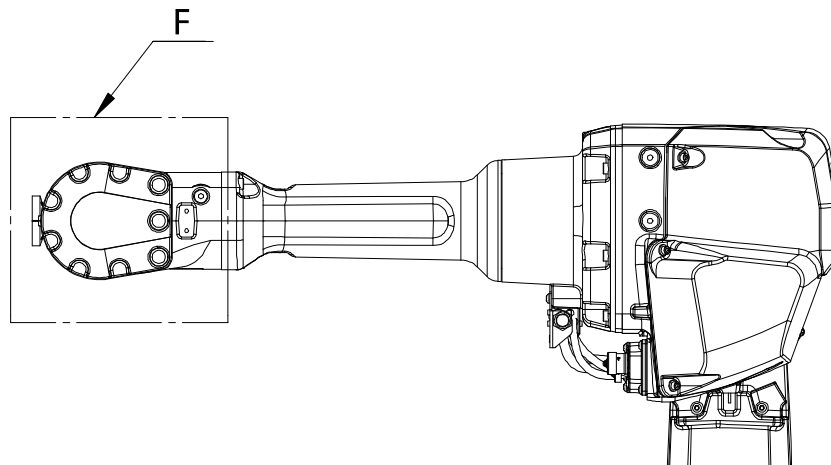


xx0900000490

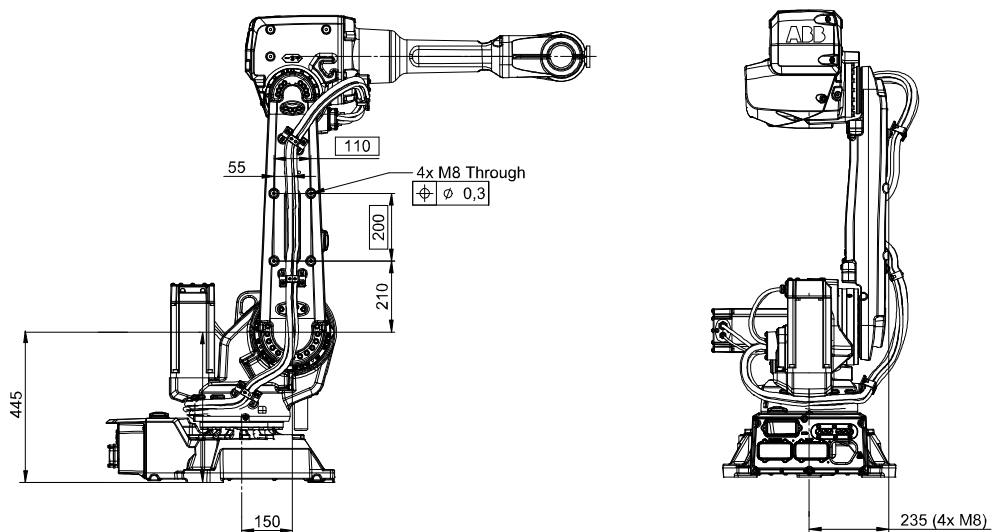


xx0900000491

Continues on next page

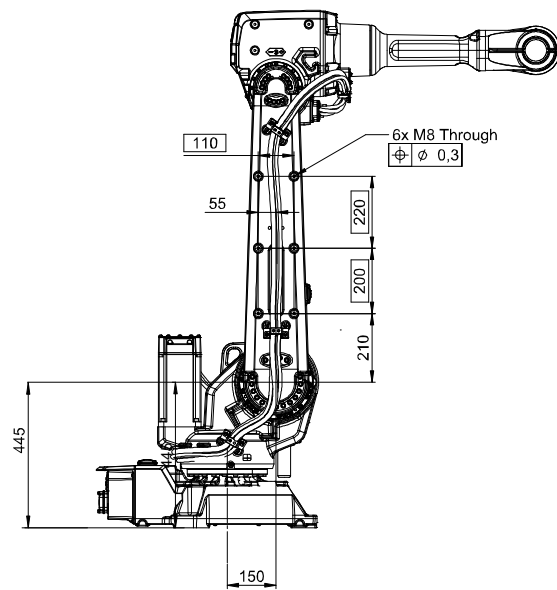


xx0900000492

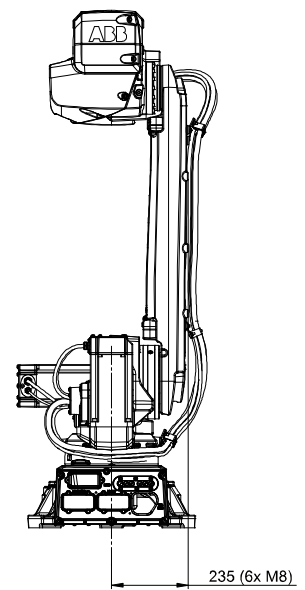

1 Description

1.6.1 Information about mounting equipment  
Continued

Holes for mounting of extra equipment for IRB 2600ID

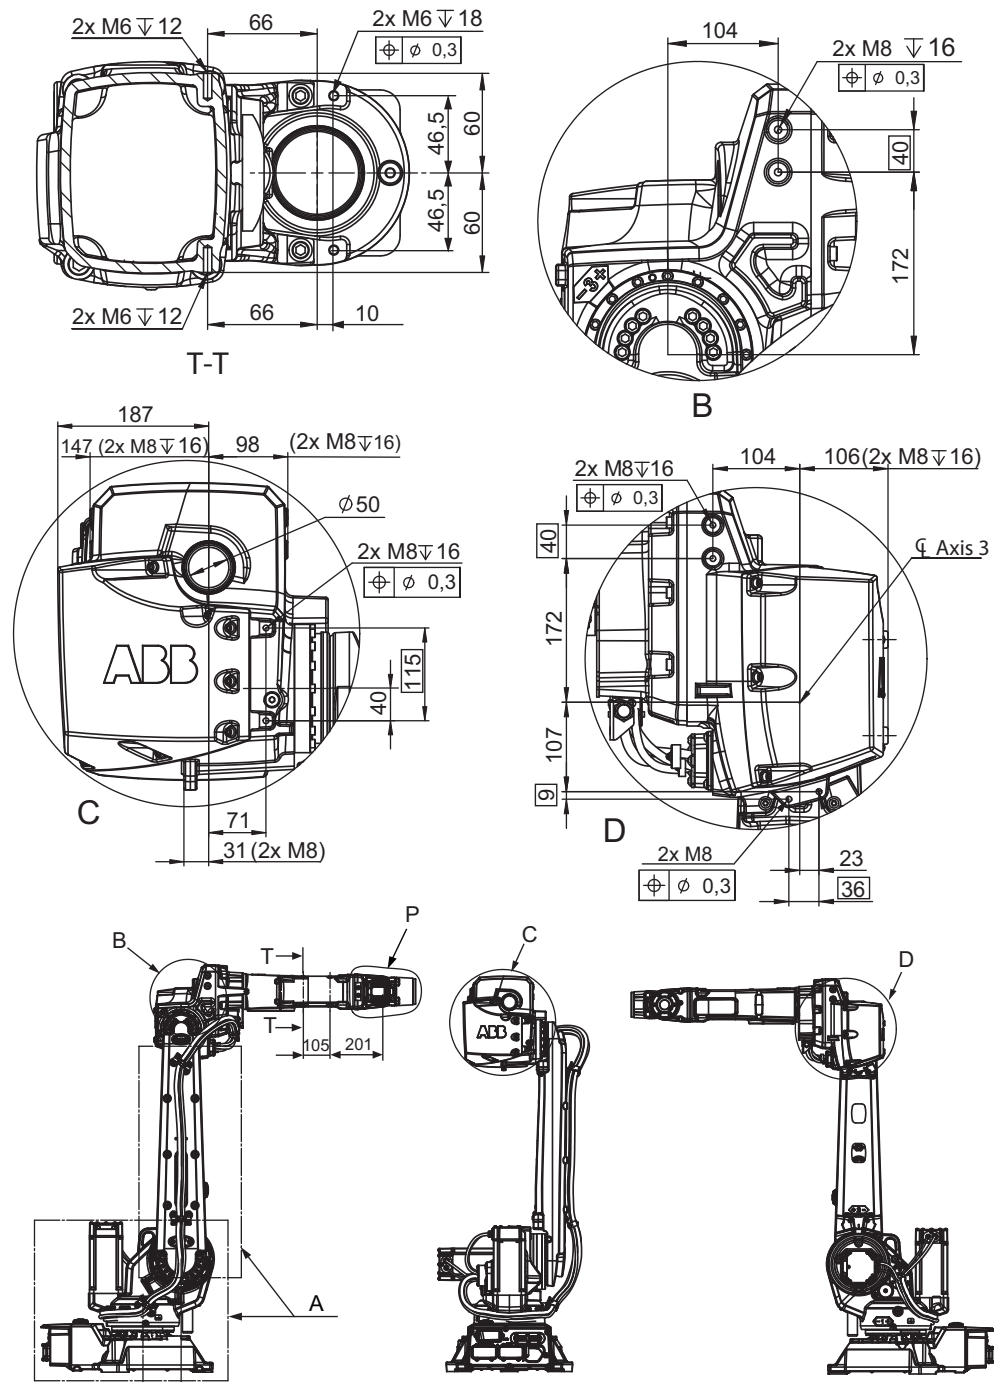


xx1000000968

Pos	Description
A	See IRB 2600 standard robot for details.

Continues on next page

### Tool flange IRB 2600

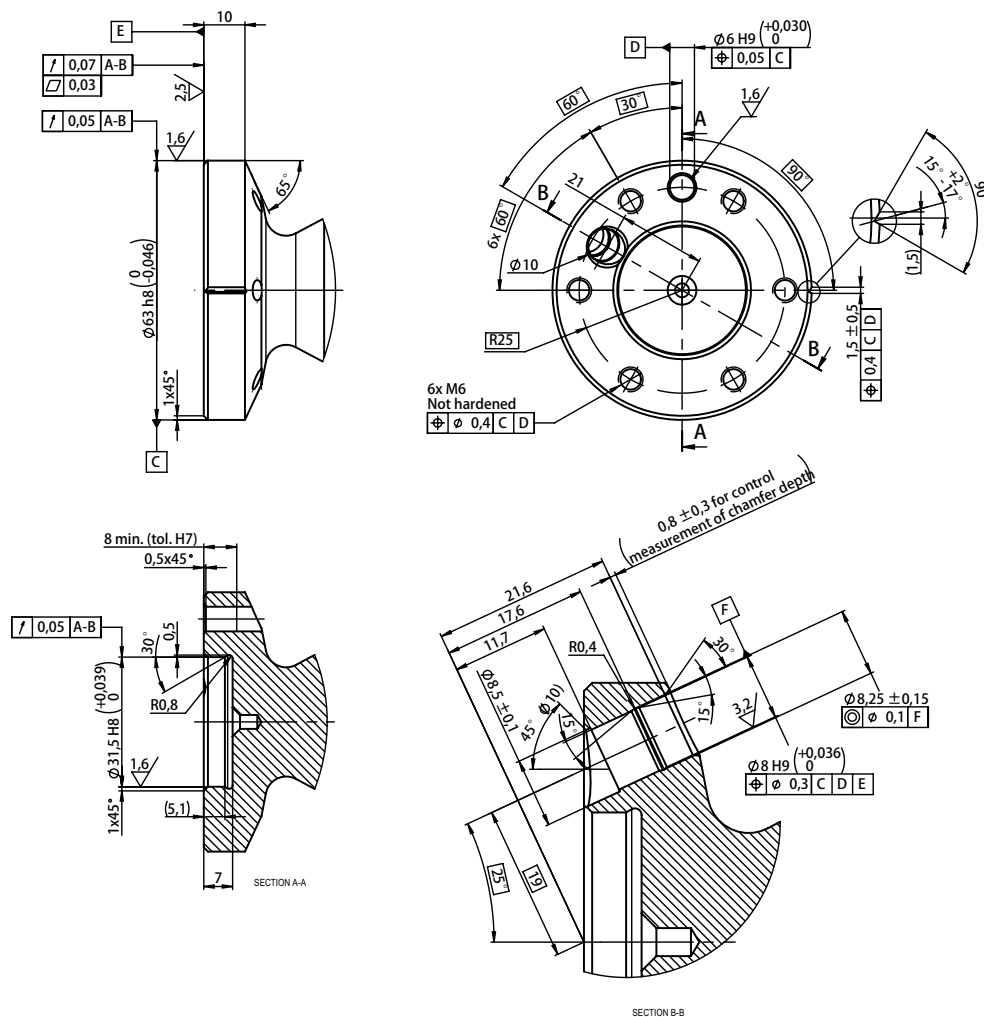

xx0800000449

For fastening of gripper tool flange to Robot tool flange every one of the screw holes for 6 screws, quality class 12.9 shall be used. Min. 10 mm used thread length.

Continues on next page





## **1.7 Maintenance and Troubleshooting**

### **1.7.1 Introduction to Maintenance and Troubleshooting**

---

**General**

The robot requires only minimum maintenance during operation. It has been designed to make it as easy to service as possible:

- Maintenance-free AC motors are used.
- Oil is used for the gear boxes.
- The cabling is routed for longevity, and in the unlikely event of a failure, its modular design makes it easy to change.

---

**Maintenance**

The maintenance intervals depend on the use of the robot, the required maintenance activities also depends on selected options. For detailed information on maintenance procedures, see Maintenance section in the Product Manual.

# 1 Description

## 1.8.1 Introduction to Robot Motion

## 1.8 Robot Motion

### 1.8.1 Introduction to Robot Motion

#### IRB 2600

Axis	Type of motion	Range of movement
1	Rotation motion	+ 180° to - 180° <sup>i</sup>
2	Arm motion	+ 155° to - 95°
3	Arm motion	+ 75° to - 180°
4	Rotation motion	+ 400° to - 400° + 251 rev. to - 251 rev. Max.
5	Bend motion	+ 120° to - 120°
6	Turn motion	+ 400° to - 400° + 274 rev. to - 274 rev. Max.

<sup>i</sup> See [Limitations for wall mounted robots on page 54](#)

For verifying each load case, please contact your local ABB organization.

The default working range for axis 4 and axis 6 can be extended by changing system parameter values in the software. Option 610 - *Independent axis* can be used for resetting the revolution counter after the axis has been rotated (no need for "rewinding" the axis).

#### Limitations for wall mounted robots

The axis 1 working range has the following limitations for wall mounted robots:

Robot variant	Max payload (kg)	Max arm-load (kg)	Working range axis 1, with max payload + max arm load	Max combined pay/arm-load (kg) for ±180° working range axis 1
IRB 2600-20/1.65	20	11	±45°	8
IRB 2600-12/1.65	12	16	±45°	8
IRB 2600-12/1.85	12	11	±40°	-

#### IRB 2600ID

Axis	Type of motion	Range of movements
1	Rotation motion	+ 180° to - 180° <sup>i</sup>
2	Arm motion	+ 155° to - 95°
3	Arm motion	+ 75° to - 180°
4	Rotation motion	+ 175° to - 175°
5	Bend motion	+ 120° to - 120°
6	Turn motion	+ 400° to - 400° + 191 rev. to - 191 rev. Max.

<sup>i</sup> See [Limitations for tilt and wall mounted robots on page 55](#)


*Continues on next page*

### Limitations for tilt and wall mounted robots

The axis 1 working range has the following limitation for tilt and wall mounting.

Mounting position	Description
Max tilting angle for full axis 1 working range	40 degrees
Max working range for axis 1 at wall mounting	± 40 degrees

### Working range

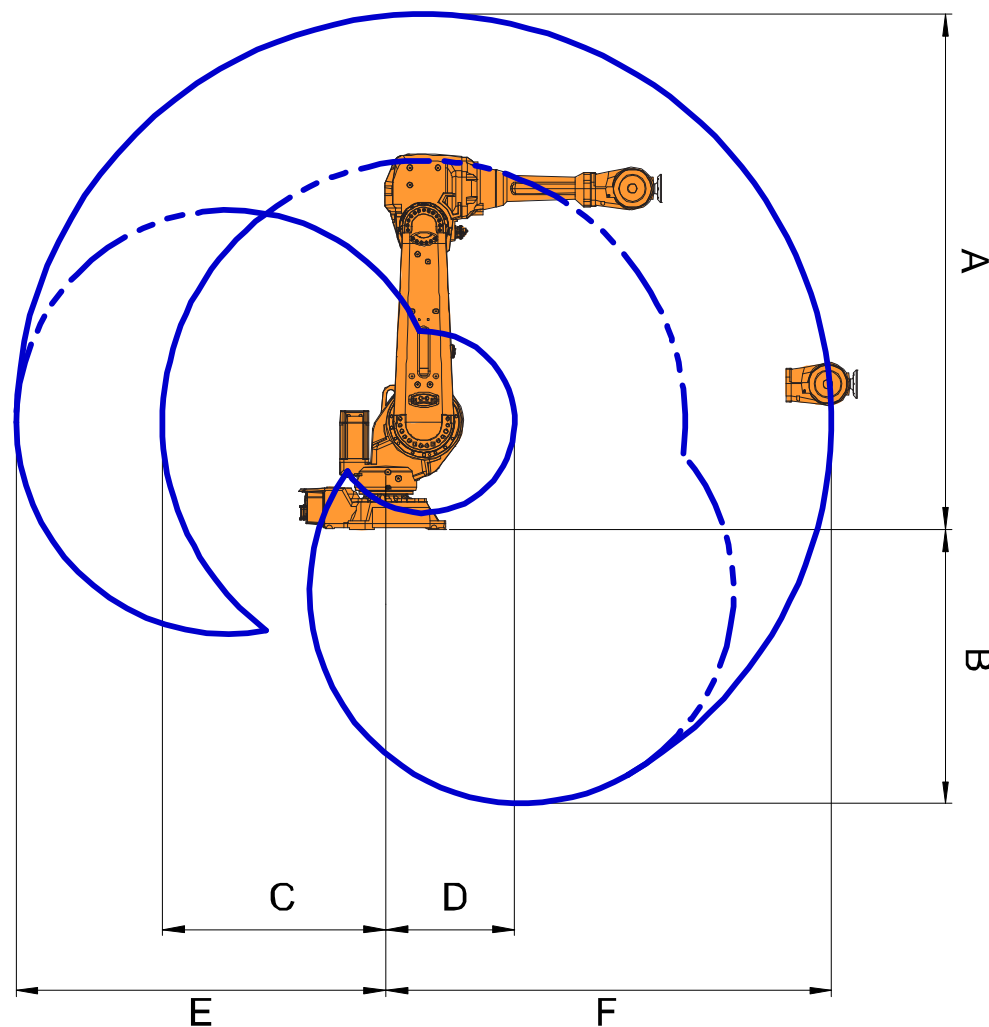

xx0800000267

Variant	Pos. A	Pos. B	Pos. C	Pos. D	Pos. E	Pos. F
IRB 2600-20/1.65	1948 mm	993 mm	837 mm	469 mm	1353 mm	1653 mm
IRB 2600-12/1.65	1948 mm	993 mm	837 mm	469 mm	1353 mm	1653 mm
IRB 2600-12/1.85	2148 mm	1174 mm	967 mm	506 mm	1553 mm	1853 mm


*Continues on next page*

## 1 Description

### 1.8.1 Introduction to Robot Motion

*Continued*

#### Working range IRB 2600ID

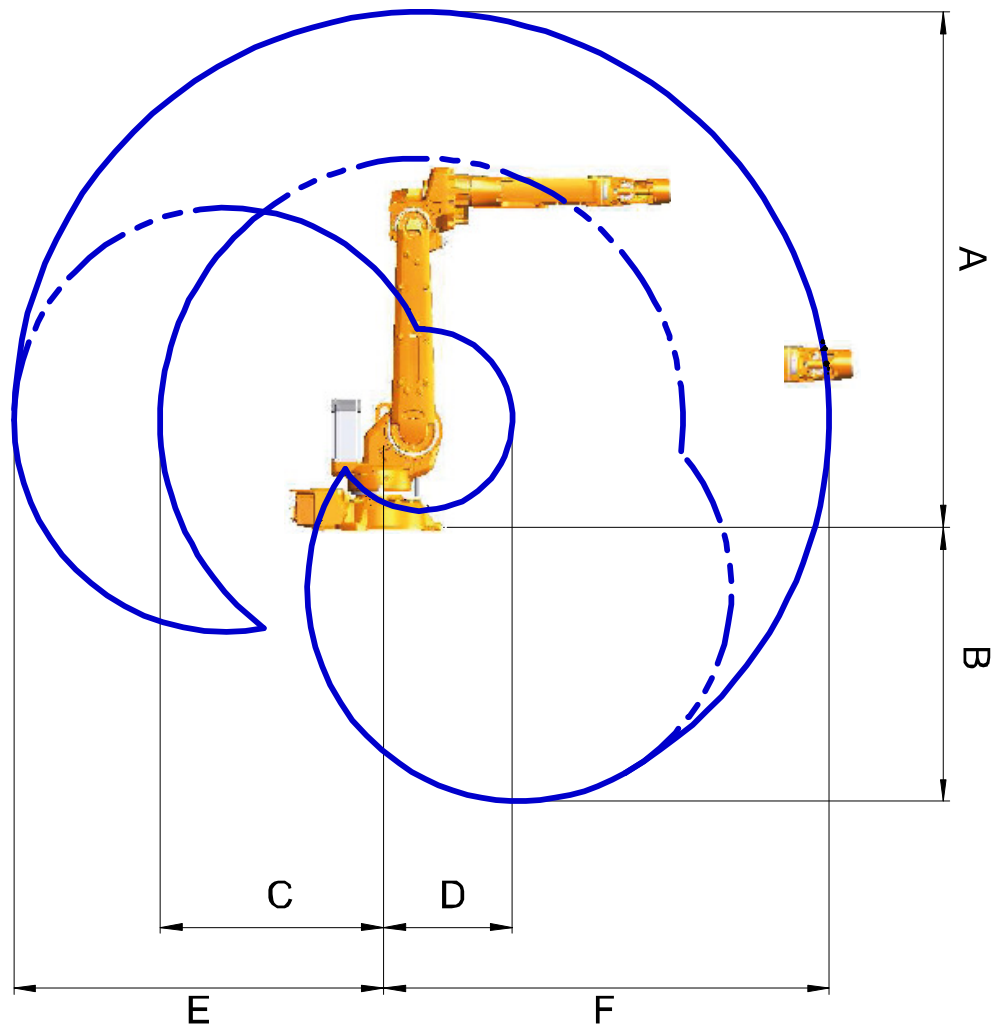

xx1000000970


Variant	Pos. A	Pos. B	Pos. C	Pos. D	Pos. E	Pos. F
IRB 2600ID-15/1.85	2145 mm	1171 mm	936 mm	542 mm	1550 mm	1850 mm
IRB 2600ID-8/2.00	2295 mm	1321 mm	1051 mm	539 mm	1700 mm	2000 mm

## 1.8.2 Performance according to ISO 9283

## General

At rated maximum load, maximum offset and 1.6 m/s velocity on the inclined ISO test plane, with all six axes in motion. Values in the table below are the average result of measurements on a small number of robots. The result may differ depending on where in the working range the robot is positioning, velocity, arm configuration, from which direction the position is approached, the load direction of the arm system. Backlashes in gearboxes also affect the result.

The figures for AP, RP, AT and RT are measured according to figure below.

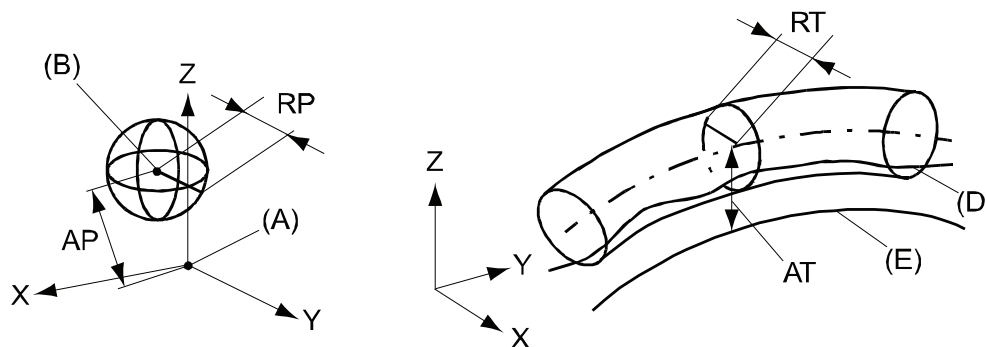

xx080000424

Pos	Description	Pos	Description
A	Programmed position	E	Programmed path
B	Mean position at program execution	D	Actual path at program execution
AP	Mean distance from programmed position	AT	Max deviation from E to average path
RP	Tolerance of position B at repeated positioning	RT	Tolerance of the path at repeated program execution

Description	IRB 2600			IRB 2600ID	
	-20/1.65	-12/1.65	-12/1.85	-15/1.85	-8/2.00
Pose repeatability, RP (mm)	0.04	0.04	0.04	0.026	0.023
Pose accuracy, AP <sup>i</sup> (mm)	0.03	0.03	0.03	0.014	0.033
Linear path repeatability, RT (mm)	0,13	0.14	0,16	0.30	0.27
Linear path accuracy, AT (mm)	0.55	0.60	0.68	0.80	0.70
Pose stabilization time, (PSt) to within 0.2 mm of the position (s)	0.00	0.02	0.03	0.05	0.063

<sup>i</sup> AP according to the ISO test above, is the difference between the reached position (position manually modified in the cell) and the average position obtained during program execution.

## 1 Description

---

### 1.8.3 Velocity

### 1.8.3 Velocity

---

#### Maximum axis speed

Robot type	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6
IRB 2600 - 20/1.65	175 °/s	175 °/s	175 °/s	360 °/s	360 °/s	500 °/s
IRB 2600 - 12/1.65	175 °/s	175 °/s	175 °/s	360 °/s	360 °/s	500 °/s
IRB 2600 - 12/1.85	175 °/s	175 °/s	175 °/s	360 °/s	360 °/s	500 °/s
IRB 2600ID-15/1.85	175 °/s	175 °/s	175 °/s	360 °/s	360 °/s	500 °/s
IRB 2600ID-8/2.00	175 °/s	175 °/s	175 °/s	360 °/s	360 °/s	500 °/s

There is a supervision function to prevent overheating in applications with intensive and frequent movements.

---

#### Axis resolution

0.001° to 0.005°.

### 1.8.4 Robot stopping distances and times

---

#### Introduction

The stopping distances and times for category 0 and category 1 stops, as required by EN ISO 10218-1 Annex B, are listed in *Product specification - Robot stopping distances according to ISO 10218-1 (3HAC048645-001)*.

## 1 Description

---

### 1.9 Cooling fan for axis 1-2 motor

### 1.9 Cooling fan for axis 1-2 motor

---

#### Option 87-1, 88-1

To be used to avoid overheating of motors and gears in applications with intensive motion (high average speed and /or high average torque and/or short wait time) of axis 1 and/or axis 2.

Valid protection for cooling fan is IP54. Fan failure stops the robot.

To determine the use of cooling fans for axis 1 and/or axis 2 motor use the “Gearbox Heat Prediction Tool” in RobotStudio. Reliable facts for the decision of need for fan or not will be achieved by entering the ambient temperature for a specific cycle. Please contact your local ABB organization.




## 1.10 Customer connections

### 1.10.1 Introduction

#### General

Customer connections are options, the cables for them are integrated in the robot and the connectors are placed on the upper arm housing and at the base. One UT0W71210SH06 connector (R2.CP(/CBUS)) and one UT0W71626H06 connector (R2.CS(/CP)). Corresponding connectors, R1.CP(/CBUS) and R1.CS(/CP) are located at the base. Hose for compressed air is also integrated into the manipulator. There is an (M16-3/8" hose) inlet at the base and an outlet on the rear part of the upper arm.

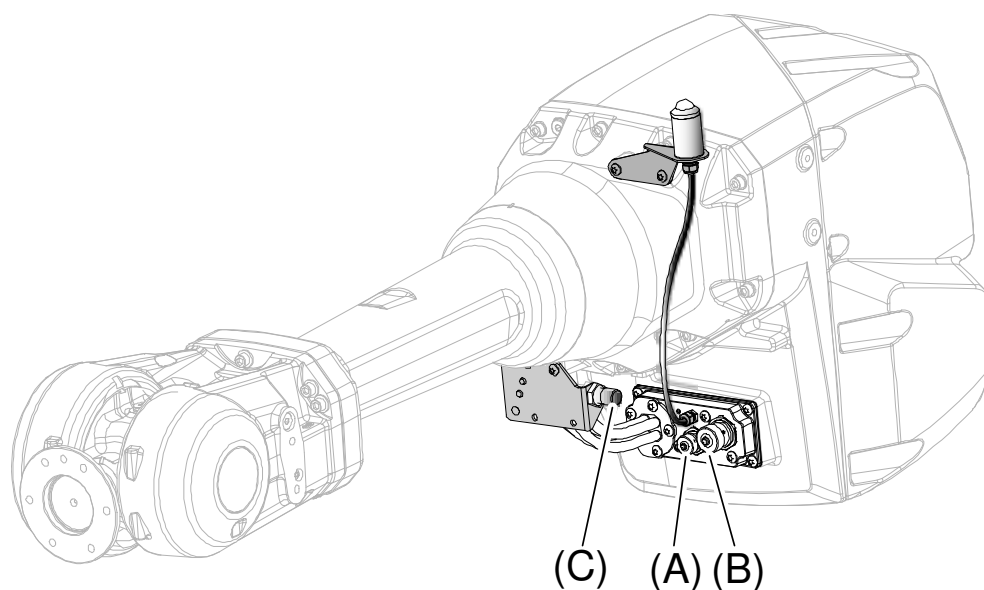

xx0800000426

Pos	Connection	Description	Quantity	Value
A	R2.CP	Customer power	4 <sup>i</sup>	300 V, 2 A
B	R2.CS	Customer signals	23	50 V, 0.5 A
C	Air	max 8 bar	1	Inner hose diameter 9.5 mm

<sup>i</sup> One protected ground is included.

Connectors when EtherNet, DeviceNet, PROFIBUS and Parallel communication, is chosen:

Pos	Connection	Description	Quantity	Value
A	R2.CBUS	Multibus comm.		PROFINET, EtherNet/IP DeviceNet PROFIBUS
B	R2.CP/CS	Cust. power/signals	3 <sup>i</sup> / 6	300 V, 2 A / 50 V, 0.5 A
C	Air	max 8 bar	1	Inner hose diameter 9.5 mm

<sup>i</sup> One protected ground is included.

**This page is intentionally left blank**

## 2 Specification of variants and options

### 2.1 Introduction to variants and options

---

#### General

The different variants and options for the IRB 2600/IRB 2600 ID are described in the following sections. The same option numbers are used here as in the specification form.

---

#### Related information

For the controller see *Product specification - Controller IRC5*.

For the software options see *Product specification - Controller software IRC5*.

## 2 Specification of variants and options

### 2.2 Manipulator

### 2.2 Manipulator

#### Variants

Option	IRB Type	Handling capacity (kg) / Reach (m)
435-95	IRB 2600	20/1.65
435-96	IRB 2600	12/1.65
435-97	IRB 2600	12/1.85
435-103	IRB 2600ID	15/1.85
435-104	IRB 2600ID	8/2.00

#### Manipulator color

Option	Description	Note
209-1	ABB Orange standard	
209-2	ABB White standard	
209-202	ABB Graphite White standard	Standard color
209-4 -192	The manipulator is painted with the chosen RAL-color.	



#### Note

Notice that delivery time for painted spare parts will increase for none standard colors.

#### Protection types

Option	Protection type	Note
287-4	Standard	IRB 2600: IP 67 IRB 2600ID upper arm: IP 54
287-3	Foundry Plus 2	See <a href="#">Protection type Foundry Plus 2 on page 9</a> for a complete description of protection type Foundry Plus 2. Not valid for IRB 2600ID versions.

#### Mounting position

Option	Description
224-2	Inverted mounting of the manipulator Not together with option 603-1 Absolute Accuracy.



#### Note

Manipulators delivered for floor mounting must have the option added before changing mounting position to inverted.

*Continues on next page*

### Media & Communication

Air supply and signals for extra equipment upper arm, see 1.9 Customer connections.

Option	Type	Description
803-1	Parallel communication and air	Includes customer power CP and customer signals CS + air.
803-2	Ethernet, parallel communication and air	Includes CP, CS and PROFINET or Ethernet/IP + air.
803-3	DeviceNet, parallel communication and air	Includes CP, CS and DeviceNet + air
803-4	PROFIBUS	Includes CP, CS and PROFIBUS + air


### Connector kit

The kit consists of connectors, pins and sockets:

Option	Description
431-1	For the connectors on the upper arm.
239-1	For the connectors on the foot if connection to manipulator.

### Flexible conduit

Protection hose for customer signals, power and hoses. Only valid for IRB 2600ID.

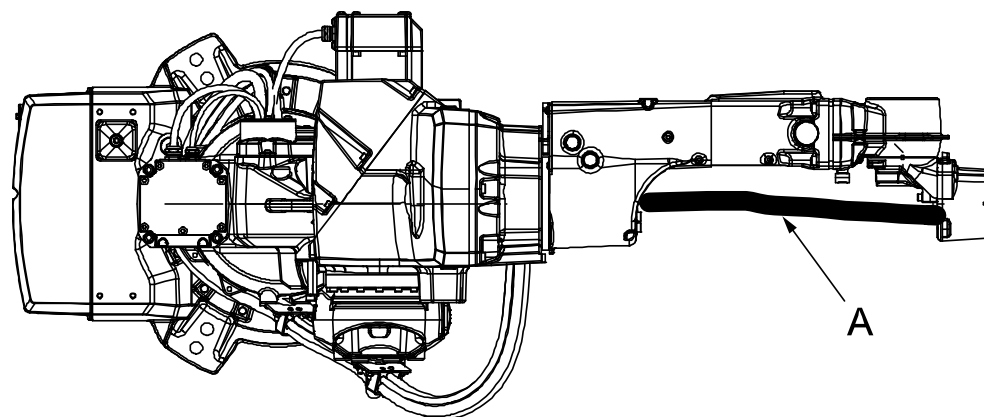

xx1000000982

Pos	Description
A	Flexible conduit, option 943-1.

### Safety lamp


Option	Description
213-1	Safety lamp safety lamp with an orange fixed light can be mounted on the manipulator. The lamp is active in MOTORS ON mode. The safety lamp is required on a UL/UR approved robot.

Continues on next page

## 2 Specification of variants and options

### 2.2 Manipulator


*Continued*

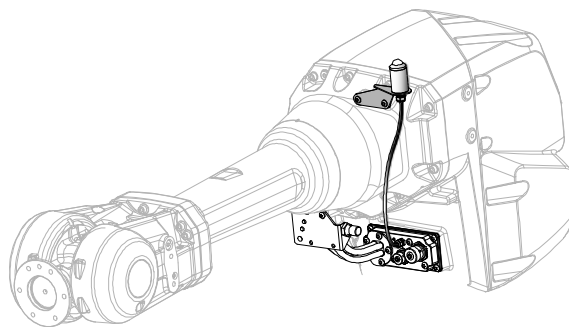

xx0800000427

#### Cooling fans for axis 1 and 2 motor

To be used to avoid overheating of motors and gears in application with intensive motion (high average speed and/or high average torque and/or short wait time) of axis 1 and axis 2. IP54 valid for cooling fan.

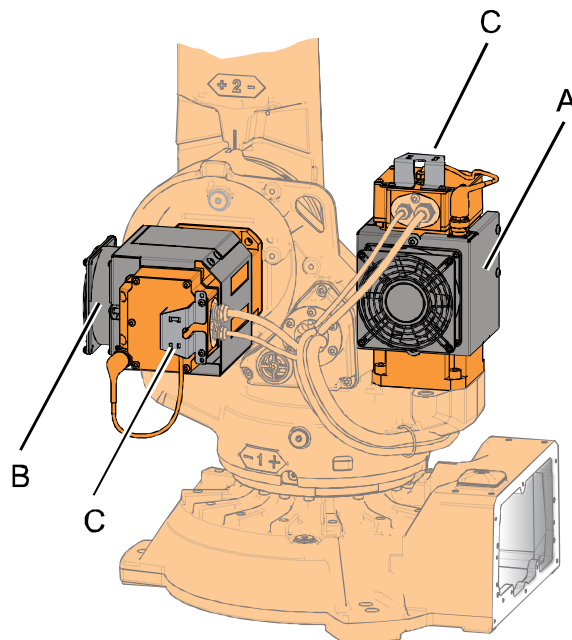

xx0900000232

Option	Description
A	Cooling fan for axis 1 motor, option 87-1.
B	Cooling fan for axis 2 motor, option 88-1.
C	Protection cover

#### Resolver connection, axis 7

A connector for resolver signals for axis 7 located on the base

Option	Description	Remark
864-1	On base	Used together with first additional drive, option 907-1.

*Continues on next page*

### Foundry Plus Cable Guard

The manipulator cables are equipped with an additional protection of aluminized leather against e.g. aluminium spitz and flashes and chips from machining.

Option	Type	Description
908-1	Foundry Plus Cable Guard	For extra protection of cables. Requires option 287-3 Foundry Plus.


### Electronic Position Switches (EPS)

The mechanical position switches indicating the position of the three main axes are replaced with electronic position switches for up to 7 axes, for increased flexibility and robustness. For more detailed information, see *Product specification - Controller IRC5* and *Application manual - Electronic Position Switches*.

### Working range limit-Axis 1

The working range of axis 1 can be limited between  $\pm 129^\circ$  to  $\pm 16.5^\circ$  in steps of  $22.5^\circ$

Option	Description
28-1 Axis 1	Two stops for restricting the working range. The stops can be mounted according to example in.

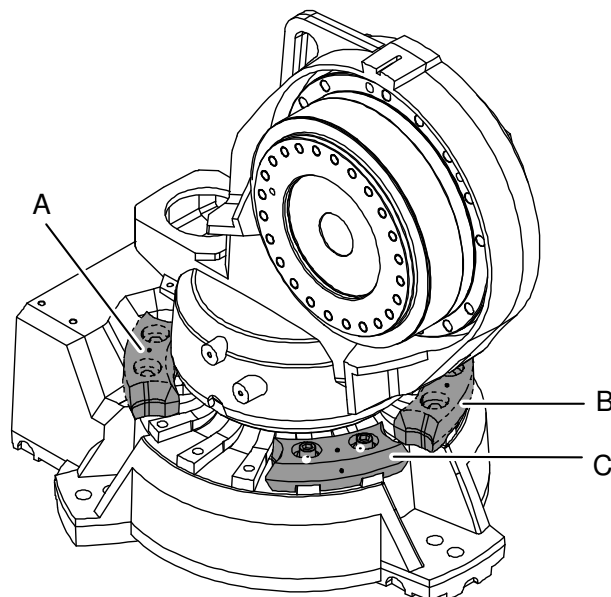

xx0800000410

Pos	Description
A	Movable mechanical stop, limited to $- 129^\circ$
B	Movable mechanical stop, limited to $+ 16.5^\circ$
C	Movable mechanical stop, limited to $- 16.5^\circ$


Continues on next page

## 2 Specification of variants and options

### 2.2 Manipulator

*Continued*

#### Warranty

Option	Type	Description
438-1	Standard warranty	Standard warranty is 12 months from <i>Customer Delivery Date</i> or latest 18 months after <i>Factory Shipment Date</i> , whichever occurs first. Warranty terms and conditions apply.
438-2	Standard warranty + 12 months	Standard warranty extended with 12 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-4	Standard warranty + 18 months	Standard warranty extended with 18 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-5	Standard warranty + 24 months	Standard warranty extended with 24 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-6	Standard warranty + 6 months	Standard warranty extended with 6 months from end date of the standard warranty. Warranty terms and conditions apply.
438-7	Standard warranty + 30 months	Standard warranty extended with 30 months from end date of the standard warranty. Warranty terms and conditions apply.
438-8	Stock warranty	<p>Maximum 6 months postponed start of standard warranty, starting from factory shipment date. Note that no claims will be accepted for warranties that occurred before the end of stock warranty. Standard warranty commences automatically after 6 months from <i>Factory Shipment Date</i> or from activation date of standard warranty in WebConfig.</p> <p> <b>Note</b></p> <p>Special conditions are applicable, see <i>Robotics Warranty Directives</i>.</p>



### 2.3 Positioners

---

#### General

Regarding positioners, see *Product specification - IRBP /D2009, 3HAC038208-001*.

## 2 Specification of variants and options

---

### 2.4 Floor cables

### 2.4 Floor cables

---

#### Manipulator cable length

Option	Lenghts (m)
210-2	7
210-3	15
210-4	22
210-5	30

---

#### Application interface connection

Option	Name	Description
16-1	Cabinet	The signals are connected to 12-pole screw terminals, Phoenix MSTB 2.5/12-ST-5.08, to the Control Module.

---

#### Connection of Parallel/CAN DeviceNet communication

Following information specifies the cable length for Parallel/CAN DeviceNet/Ethernet + PROFIBUS floor cables for connections between cabinets and manipulator.

Option	Lenghts (m)
94-1/90-2/859-1/92-2	7
94-2/90-3/859-2/92-3	15
90-4/859-3/92-4	22
94-4/90-5/859-4/92-5	30

## 2.5 DressPack

## Process module

Option	Type	Description
768-1	Empty cabinet small	See <i>Product specification - Controller IRC5 with FlexPendant</i> , list of variants
768-2	Empty cabinet large	See <i>Product specification - Controller IRC5 with FlexPendant</i> , list of variants

## WeldGuide III

Option	Type	Description
958-1	Basic	Only together with ArsitoMig 4000i/5000i, MigRob and TPS power sources. Digital I/O or AD Combi I/O is needed for WeldGuide functions. Requires option WeldGuide MultiPass [815-2].
958-2	Advanced	Only together with ArsitoMig 4000i/5000i, MigRob and TPS power sources. Digital I/O or AD Combi I/O is needed for WeldGuide functions. Requires option WeldGuide MultiPass [815-2].

## Installation kit

Option	Type	Description
715-1	Installation kit	See <i>Product specification - Controller IRC5 with FlexPendant</i> , list of variants

## 2 Specification of variants and options

---

### 2.6 Process equipment

### 2.6 Process equipment

---

#### Torch service

Option	Type	Description
1037-1	ABB TSC	ABB Torch Service Center
1037-2	ABB TC96	ABB Torch Cleaner
1037-5	BullsEye	BullsEye stand alone

---

#### Torch service options

Option	Type	Description
1038-1	Extension pedestal	Extension pedestal for TSC/TC/BullsEye

## 2.7 User documentation

---

### User documentation

The user documentation describes the robot in detail, including service and safety instructions.

All documents can be found via myABB Business Portal, [www.myportal.abb.com](http://www.myportal.abb.com).

**This page is intentionally left blank**

## 3 Accessories

### 3.1 Introduction to accessories

---

#### General

There is a range of tools and equipment available, especially designed for the manipulator.

---

#### Basic software and software options for robot and PC

For more information, see *Product specification - Controller IRC5 with FlexPendant* and *Product specification - Controller software IRC5*.

---

#### Robot peripherals

- Track Motion
- Motor Units
- Positioners

**This page is intentionally left blank**



# Index

## **A**

accessories, 75

## **C**

Calibration Pendulum, 26

category 0 stop, 59

category 1 stop, 59

## **D**

documentation, 73

## **E**

Electronic Position Switches, 67

EPS, 67

## **F**

fine calibration, 26

## **I**

instructions, 73

## **M**

manuals, 73

## **O**

options, 63

## **P**

product standards, 18

## **S**

safety standards, 18

service instructions, 73

standards, 18

ANSI, 19

CAN, 19

EN, 18

EN IEC, 18

EN ISO, 18

standard warranty, 68

stock warranty, 68

stopping distances, 59

stopping times, 59

## **U**

user documentation, 73

## **V**

variants, 63

## **W**

warranty, 68







**ABB AB, Robotics**

**Robotics and Motion**

S-721 68 VÄSTERÅS, Sweden

Telephone +46 (0) 21 344 400

**ABB AS, Robotics**

**Robotics and Motion**

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

**ABB Engineering (Shanghai) Ltd.**

Robotics and Motion

No. 4528 Kangxin Highway

PuDong District

SHANGHAI 201319, China

Telephone: +86 21 6105 6666

**ABB Inc.**

**Robotics and Motion**

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

**[abb.com/robotics](http://abb.com/robotics)**